

# Installation, Operation, and Maintenance

## Split System Air Conditioners Odyssey™


Cooling Condenser — 6 to 25 Tons

**(60 Hz)**

TTA073G/H\*\*\*A  
TTA090G/H\*\*\*A  
TTA120G/H/J\*\*\*A  
TTA150H\*\*\*A  
TTA180H/J\*\*\*A  
TTA240H/J\*\*\*A  
TTA300J\*\*\*A

**(50 Hz)**

TTA061G/H\*\*\*A  
TTA076G/H\*\*\*A  
TTA101G/H/J\*\*\*A  
TTA126H\*\*\*A  
TTA156H/J\*\*\*A  
TTA201H/J\*\*\*A  
TTA251J\*\*\*A

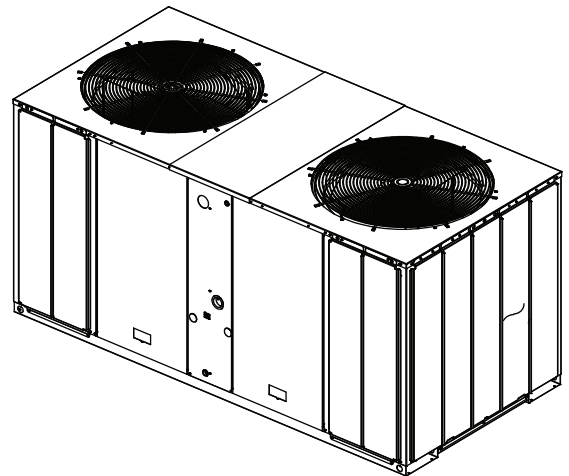

### **⚠ SAFETY WARNING**

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

# Introduction

Read this manual thoroughly before operating or servicing this unit.

## Warnings, Cautions, and Notices

Safety advisories appear throughout this manual as required. Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

The three types of advisories are defined as follows:

### **⚠ WARNING**

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

### **⚠ CAUTION**

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert against unsafe practices.

### **NOTICE**

Indicates a situation that could result in equipment or property-damage only accidents.

## Important Environmental Concerns

Scientific research has shown that certain man-made chemicals can affect the earth's naturally occurring stratospheric ozone layer when released to the atmosphere. In particular, several of the identified chemicals that may affect the ozone layer are refrigerants that contain Chlorine, Fluorine and Carbon (CFCs) and those containing Hydrogen, Chlorine, Fluorine and Carbon (HCFCs). Not all refrigerants containing these compounds have the same potential impact to the environment. Trane advocates the responsible handling of all refrigerants-including industry replacements for CFCs such as HCFCs and HFCs.

## Important Responsible Refrigerant Practices

Trane believes that responsible refrigerant practices are important to the environment, our customers, and the air conditioning industry. All technicians who handle refrigerants must be certified. The Federal Clean Air Act (Section 608) sets forth the requirements for handling, reclaiming, recovering and recycling of certain refrigerants and the equipment that is used in these service procedures. In addition, some states or municipalities may have additional requirements that must also be adhered to for responsible management of refrigerants. Know the applicable laws and follow them.

### **⚠ WARNING**

#### **Proper Field Wiring and Grounding Required!**

Failure to follow code could result in death or serious injury.

All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses **FIRE** and **ELECTROCUTION** hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state electrical codes.

### **⚠ WARNING**

#### **Personal Protective Equipment (PPE) Required!**

Failure to wear proper PPE for the job being undertaken could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the instructions below:

- Before installing/servicing this unit, technicians **MUST** put on all PPE required for the work being undertaken (Examples; cut resistant gloves/sleeves, butyl gloves, safety glasses, hard hat/bump cap, fall protection, electrical PPE and arc flash clothing). **ALWAYS** refer to appropriate Material Safety Data Sheets (MSDS)/Safety Data Sheets (SDS) and OSHA guidelines for proper PPE.
- When working with or around hazardous chemicals, **ALWAYS** refer to the appropriate MSDS/SDS and OSHA/GHS (Global Harmonized System of Classification and Labelling of Chemicals) guidelines for information on allowable personal exposure levels, proper respiratory protection and handling instructions.
- If there is a risk of energized electrical contact, arc, or flash, technicians **MUST** put on all PPE in accordance with OSHA, NFPA 70E, or other country-specific requirements for arc flash protection, **PRIOR** to servicing the unit. **NEVER PERFORM ANY SWITCHING, DISCONNECTING, OR VOLTAGE TESTING WITHOUT PROPER ELECTRICAL PPE AND ARC FLASH CLOTHING. ENSURE ELECTRICAL METERS AND EQUIPMENT ARE PROPERLY RATED FOR INTENDED VOLTAGE.**

**⚠ WARNING****Refrigerant under High Pressure!**

Failure to follow instructions below could result in an explosion which could result in death or serious injury or equipment damage.

System contains oil and refrigerant under high pressure. Recover refrigerant to relieve pressure before opening the system. See unit nameplate for refrigerant type. Do not use non-approved refrigerants, refrigerant substitutes, or refrigerant additives.

**⚠ WARNING****R-410A Refrigerant under Higher Pressure than R-22!**

Failure to use proper equipment or components as described below, could result in equipment failing and possibly exploding, which could result in death, serious injury, or equipment damage.

The units described in this manual use R-410A refrigerant which operates at higher pressures than R-22. Use **ONLY** R-410A rated service equipment or components with these units. For specific handling concerns with R-410A, please contact your local Trane representative.

**⚠ WARNING****Explosion Hazard!**

Failure to follow instructions below could result in an explosion which could result in death or serious injury, and equipment damage.

**NEVER** bypass system safeties in order to pump down the unit component's refrigerant into the microchannel heat exchanger (MCHE) coil. Do **NOT** depress the compressor contactor since it effectively bypasses the high-pressure control.

## Copyright

This document and the information in it are the property of Trane, and may not be used or reproduced in whole or in part without written permission. Trane reserves the right to revise this publication at any time, and to make changes to its content without obligation to notify any person of such revision or change.

## Trademarks

All trademarks referenced in this document are the trademarks of their respective owners.

## Revision History

- Added warning related to proper handling procedures during the maintenance and servicing of microchannel units. Please do not pump down charge into a microchannel condenser and never bypass unit safety procedures. See [“Refrigerant Piping Procedures \(Outdoor Units\),” p. 22](#) for additional information.
- Minor running edits included.

# Table of Contents

Model Number Description .....	6	Pre-Start .....	43
Cooling Condenser .....	6	Control Circuit Features .....	43
General Information .....	7	Discharge Temperature Limit	
Unit Description .....	7	(DTL).....	43
Pre-Installation .....	8	Low Outdoor Ambient Cooling .....	43
Unit Inspection .....	8	Evaporator Defrost Control	
Inspection Checklist .....	8	(EDC) .....	43
Testing for Leaks.....	8	Low Pressure Cut-Out (LPCO) .....	43
Lifting Recommendations .....	8	High Pressure Cut-Out (HPCO) .....	43
Clearances .....	8	Internal Overload Protector	
Unit Mounting.....	9	(IOL) .....	43
Structural Preparation .....	9	Start-Up .....	44
Rooftop Mounting .....	9	Electromechanical Controls.....	44
Ground Level Mounting .....	9	General .....	44
Dimensional Data .....	10	Evaporator Fan (Indoor Supply	
Weights .....	19	Air) .....	44
Cooling Condenser .....	19	Cooling Mode .....	44
Installation .....	21	ReliaTel Controls .....	44
Refrigerant Piping Guidelines.....	21	Control Cooling Mode .....	44
Refrigerant Piping Procedures (Outdoor		Control Evaporator Fan	
Units).....	22	Operation .....	45
Refrigerant Piping Procedures (Indoor		Control Heating Operation .....	45
Unit).....	23	Service Test Modes for ReliaTel™	
Leak Check .....	23	Controls .....	46
System Evacuation.....	23	Test Modes.....	46
Insulating and Isolating Refrigerant		Step Test Mode .....	46
Lines .....	24	Resistance Test Mode .....	46
Refrigerant Charging Procedure .....	24	Auto Test Mode .....	46
Charging Levels.....	25	Troubleshooting .....	47
Liquid Charging .....	27	Troubleshooting ReliaTel™ Controls.....	47
Electrical Wiring .....	28	System Status Checkout Procedure .....	47
Unit Power Supply .....	28	Method 1.....	47
Low Voltage Wiring .....	28	Method 2.....	48
Electromechanical Controls .....	28	Temperature Tests .....	48
ReliaTel Controls .....	28	Test 1 - Zone Temperature	
Field Wiring .....	29	Thermistor (ZTEMP).....	48
Refrigerant Circuit.....	32	Test 2 - Cooling Set Point (CSP) and	
Electrical Data .....	33	Heating Set Point (HSP).....	48
Charging Charts and Superheat .....	37	Test 3 - System Mode and Fan	
Installation Checklist.....	42	Selection .....	49
Refrigerant Piping .....	42	Test 4 - LED Indicator Test (SYS ON,	
Electrical Wiring .....	42	HEAT, & COOL).....	49
		Programmable & Digital Zone Sensor	
		Test.....	49
		Testing Serial Communication	
		Voltage.....	49
		RLCI Loss of Communications.....	50
		Resetting Cooling and Heating	
		Lockouts .....	50

Method 1.....	50	Annually (Cooling Season) .....	51
Method 2.....	50	Coil Cleaning .....	51
Zone Temperature Sensor (ZTS) Service		Microchannel (MCHE) Coils .....	51
Indicator .....	50	Maintenance Log .....	53
Maintenance .....	51	Wiring Diagram Matrix .....	54
Monthly .....	51		

# Model Number Description

## Cooling Condenser

TTA	2 40	J	3	0 0	*	*
1 2 3	4 5 6	7	8	9 10	11	12

**Note:** When ordering replacement parts or requesting service, be sure to refer to the specific model number, serial number, and DL number (if applicable) stamped on the unit nameplate.

### DIGITS 1 - 3: Product Type

TTA = Split System Cooling

### DIGITS 4 - 6: Nominal Gross Cooling Capacity (MBh)

061 = 5 Tons (50Hz)  
 073 = 6 Tons (60Hz)  
 076 = 6.25 Tons (50Hz)  
 090 = 7.5 Tons (60Hz)  
 101 = 8.33 Tons (50Hz)  
 120 = 10 Tons (60Hz)  
 126 = 10.4 Tons (50Hz)  
 150 = 12.5 Tons (60Hz)  
 156 = 13.0 Tons (50Hz)  
 180 = 15 Tons (60Hz)  
 201 = 16.7 Tons (50Hz)  
 240 = 20 Tons (60Hz)  
 251 = 20.9 Tons (50Hz)  
 300 = 25 Tons (60Hz)

### DIGIT 7: Major Development Sequence

G = Single Compressor, Single Circuit, Microchannel  
 H = Dual Compressor, Dual Circuit, Microchannel  
 J = Dual Compressor, Single Circuit (Manifold Scroll Compressors), Microchannel

### DIGIT 8: Electrical Characteristics

3 = 208–230/60/3  
 4 = 460/60/3  
 W = 575/60/3  
 D = 380-415/50/3  
 K = 380/60/3

### DIGITS 9 - 10: Factory Installed Options

00 = Packed Stock  
 0S = Coated Coil  
 0R = ReliaTel, no LCI Board  
 0T = ReliaTel, no LCI Board with Coated Coil  
 0U = ReliaTel, with LCI Board  
 0W = ReliaTel, with LCI Board and Coated Coil  
 H0 = Hail Guard with Packed Stock  
 HS = Hail Guard with Coated Coil  
 HR = Hail Guard with ReliaTel, no LCI Board  
 HT = Hail Guard with ReliaTel, no LCI Board with Coated Coil  
 HU = Hail Guard with ReliaTel, with LCI Board  
 HW = Hail Guard with ReliaTel, with LCI Board and Coated Coil

### DIGITS 11: Minor Design Sequence

\* = Current Design Sequence<sup>1</sup>

### DIGITS 12: Service Digit

\* = Current Design Sequence<sup>1</sup>

<sup>1</sup>. \* = sequential alpha character

# General Information

This manual describes proper installation, operation, and maintenance procedures for air-cooled systems. By carefully reviewing the information within this manual and following the instructions, the risk of improper operation and/or component damage will be minimized. It is important that periodic maintenance be performed to help assure trouble free operation. Should equipment failure occur, contact a qualified service organization with qualified, experienced HVAC technicians to properly diagnose and repair this equipment.

**Important:** *All phases of this installation must comply with the NATIONAL, STATE & LOCAL CODES. In addition to local codes, the installation must conform with National Electric Code -ANSI/NFPA NO. 70 LATEST REVISION.*

Any individual installing, maintaining, or servicing this equipment must be properly trained, licensed and qualified.

**Important:** *Do not remove the VFD without first contacting technical support! For performance-related questions and diagnostic support in North America call 1-877-872-6363. Any return requires a claim number FIRST. Removal of the VFD prior to this step will void the unit's warranties.*

Installation procedures should be performed in the sequence that they appear in this manual. Do not destroy or remove the manual from the unit. The manual should remain weather-protected with the unit until all installation procedures are complete.

**Note:** *It is not the intention of this manual to cover all possible variations in systems that may occur or to provide comprehensive information concerning every possible contingency that may be encountered during an installation. If additional information is required or if specific problems arise that are not fully discussed in this manual, contact your local sales office.*

Use the "Installation Checklist," p. 42 provided in this manual to verify that all necessary installation procedures have been completed. Do not use the checklist as a substitute for reading the information contained in the manual. Read the entire manual before beginning installation procedures.

## Unit Description

These condensers come with single, dual and manifolded compressor options. Single compressor outdoor units feature a single refrigeration circuitry, requiring only one set of refrigerant lines. Dual compressor/dual circuit models give true stand-by protection; if one compressor fails, the second will automatically start-up. Also, the first compressor can be serviced without shutting down the unit since the refrigerant circuits are independent. During light load conditions, only one compressor will operate to save energy. The dual manifolded scroll compressors come with two stages of capacity modulation and a single refrigeration circuit.

# Pre-Installation

## Unit Inspection

Inspect material carefully for any shipping damage. If damaged, it must be reported to, and claims made against the transportation company. Compare the information that appears on the unit nameplate with ordering and submittal data to ensure the proper unit was shipped. Available power supply must be compatible with electrical characteristics specified on component nameplates. Replace damaged parts with authorized parts only.

### Inspection Checklist

To protect against loss due to damage incurred in transit, complete the following checklist upon receipt of the unit.

- ☐ Inspect individual pieces of the shipment before accepting the unit. Check for obvious damage to the unit or packing material.
- ☐ Inspect the unit for concealed damage before it is stored and as soon as possible after delivery. Concealed damage must be reported within 15 days. If concealed damage is discovered, stop unpacking the shipment. Do not remove damaged material from the receiving location. Take photos of the damage if possible. The owner must provide reasonable evidence that the damage did not occur after delivery.
- ☐ Notify the carrier's terminal of damage immediately by phone and by mail. Request an immediate joint inspection of the damage by the carrier and the consignee.
- ☐ Notify the sales representative and arrange for repair. Do not repair the unit until the damage is inspected by the carrier's representative.

## Testing for Leaks

All units are shipped with a holding charge of nitrogen in each circuit and should be leak tested before installation.

1. Remove the access panel.
2. Locate the liquid line or suction line access valve for each circuit.
3. Install gauges to determine if the circuits are still pressurized. If not, the charge has escaped and should be repaired as required to obtain a leak-free circuit.

## Lifting Recommendations

### ⚠ WARNING

#### Improper Unit Lift!

Failure to properly lift unit could result in unit dropping and possibly crushing operator/ technician which could result in death or serious injury, and equipment or property-only damage. Test lift unit approximately 24 inches to verify proper center of gravity lift point. To avoid dropping of unit, reposition lifting point if unit is not level.

### NOTICE

#### Equipment Damage!

Use spreader bars to prevent straps from damaging the unit. Install the bars between lifting straps, both underneath the unit and above the unit to prevent the straps from crushing the unit cabinet or damaging the finish.

Before preparing the unit for lifting, estimate the approximate center of gravity for lifting safety. Because of placement of internal components, the unit weight may be unevenly distributed. See ["Weights," p. 19](#) for approximate unit weights.

The crated unit can be moved using a forklift of suitable capacity. For lifting the unit, attach lifting straps or slings securely to the lifting holes at each corner (see unit drawings in ["Weights," p. 19](#)). Use spreader bars to protect the unit casing from damage. Test lift the unit to determine proper balance and stability.

## Clearances

Provide enough space around the unit to allow unrestricted access to all service points. Refer to the ["Dimensional Data," p. 10](#) for unit dimensions and minimum required service and free air clearances. Observe the following points to ensure proper unit operation.

1. Do not install the unit under a low overhang. Condenser discharge must not be restricted—refer to notes in ["Dimensional Data drawings," p. 10](#).  
**Important:** Do not obstruct condenser discharge air. This can result in warm air recirculation through the coil.
2. Do not locate the unit in a position where runoff water can fall into the fan discharge openings.
3. Condenser intake air is supplied from three or four sides of the unit. Adhere to the minimum required clearances given in unit dimensional drawings (see ["Dimensional Data," p. 10](#)).

## Unit Mounting

### ⚠ WARNING

#### Mounting Integrity!

Failure to follow instruction below could result in death or serious injury or possible equipment or property-only damage.

Ensure the roof structure supports are strong enough to support the weight of the unit and any accessories.

## Structural Preparation

### NOTICE

#### Roof Damage!


System contains oil and refrigerant under high pressure. Roofs should be protected from exposure to oils and refrigerant in the system. If rooftop is not protected, damage to the roof may occur.

**Important:** Refer to local building codes for proper installation. All installation must comply with local building codes.

## Rooftop Mounting

If the unit will be roof mounted, determine for certain that the structure is strong enough to support the unit and any required accessories, see [“Weights,” p. 19](#). The unit should be elevated on a level, field fabricated four-inch steel or wood 4" x 4" mounting frame. Complete the frame and secure it into position before lifting the unit to the roof. The mounting frame must support a minimum of three of the unit's four sides and should span roof supports to distribute the load on the roof.

Figure 1. Roof mounted unit

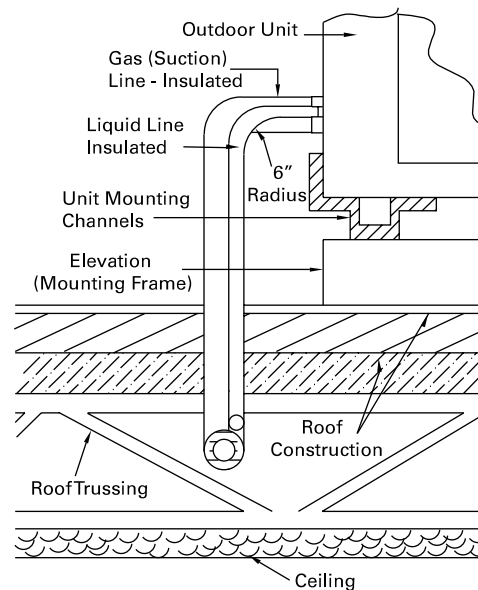


## Ground Level Mounting

For ground level installation, the unit base should be adequately supported and hold the unit near level. The installation must meet the guidelines set forth in local codes. The support should extend two inches beyond the unit base channels at all points. The unit and support must be isolated from any adjacent structure to prevent possible noise or vibration problems. Any ground level location must comply with required clearances given in the unit dimensional drawings (see [“Dimensional Data,” p. 10](#)).

# Dimensional Data


Figure 2. Height, width and depth measurements

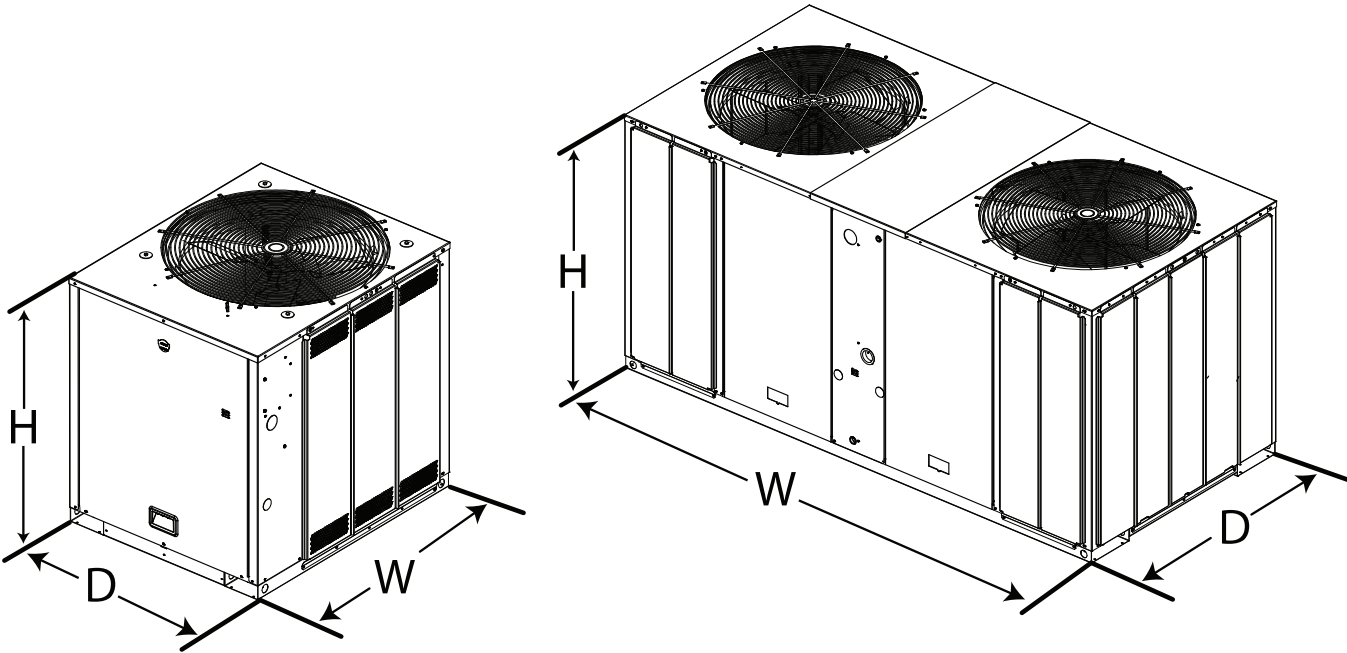

	H - in. (mm)	W - in. (mm)	D - in. (mm)
TTA061, 073, 076, 090	46.1 (1171)	45 (1143)	38 (965.2)
TTA101, 120	46.1 (1171)	55 (1397)	42 (1067)
TTA126, 150	52.1 (1323)	55 (1397)	42 (1067)
TTA156, 180, 201, 240	52.1 (1323)	96 (2438)	48 (1219)
TTA251, 300	58.1 (1476)	96 (2438)	48 (1219)

**Note:** Full dimensional data available on next pages.

Figure 3. 5, 6, 6.25 and 7.5 ton condensing unit, single compressor, microchannel

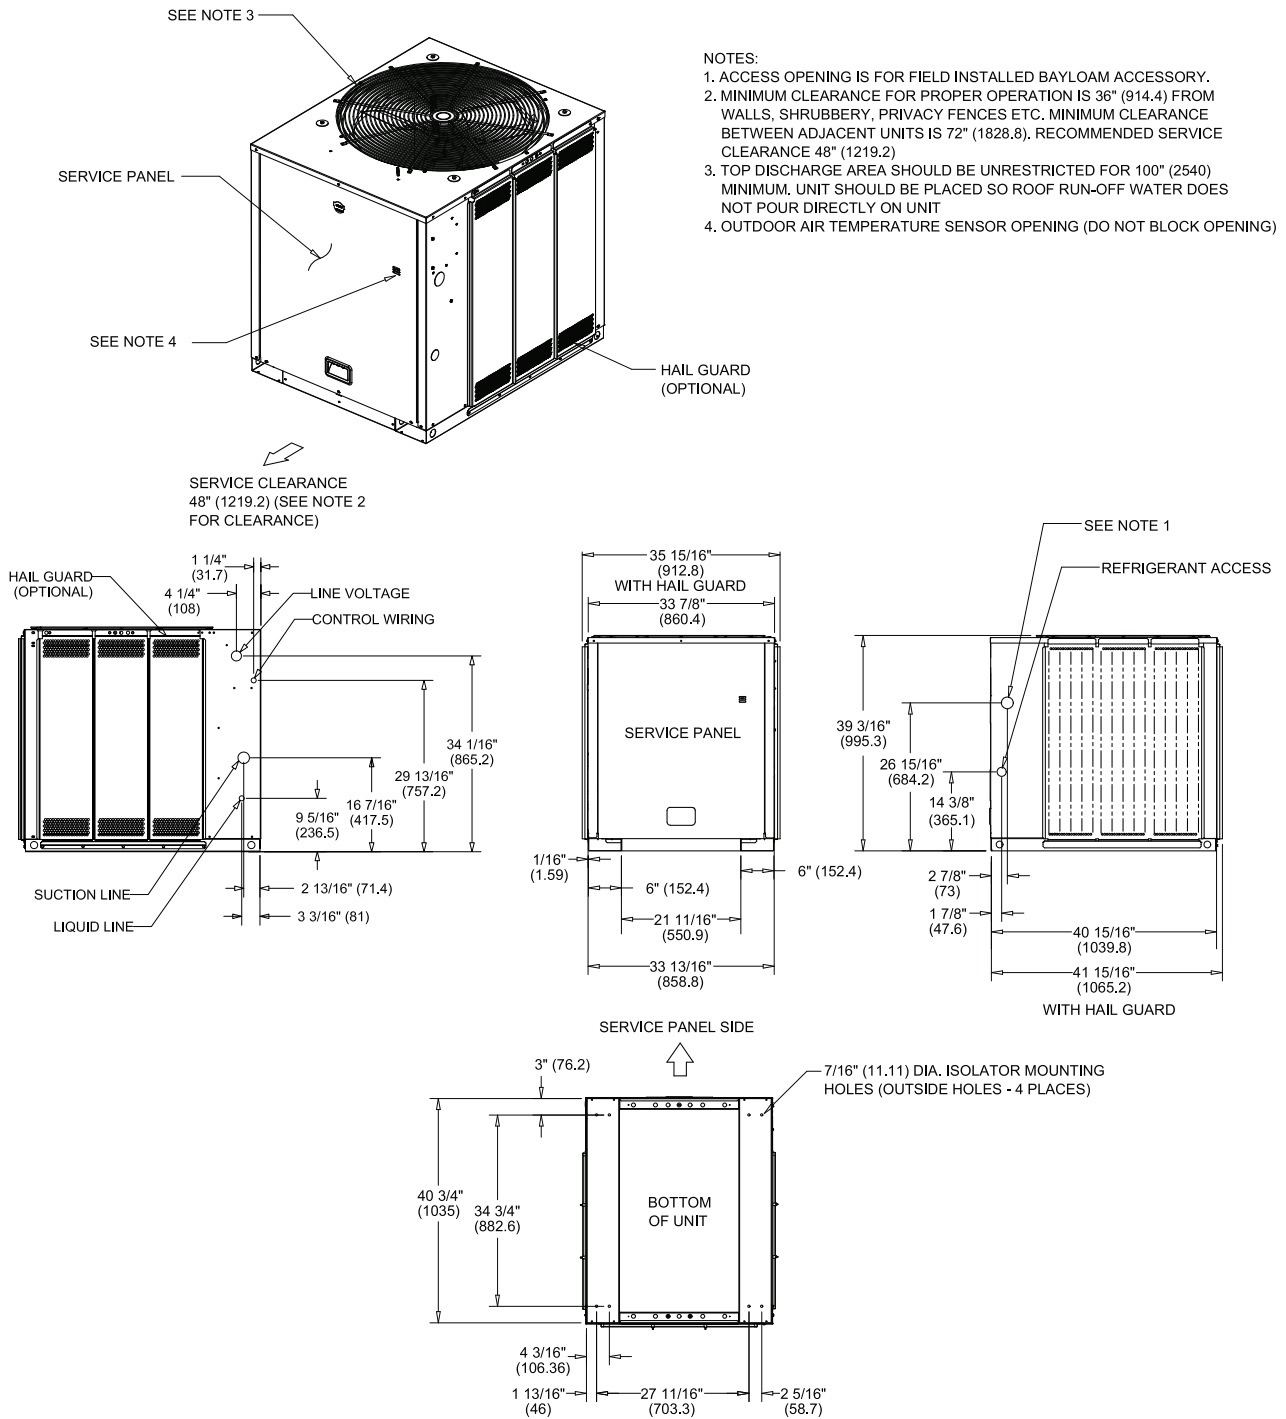

**Figure 4. 5, 6, 6.25 and 7.5 ton condensing unit, dual compressor, microchannel**



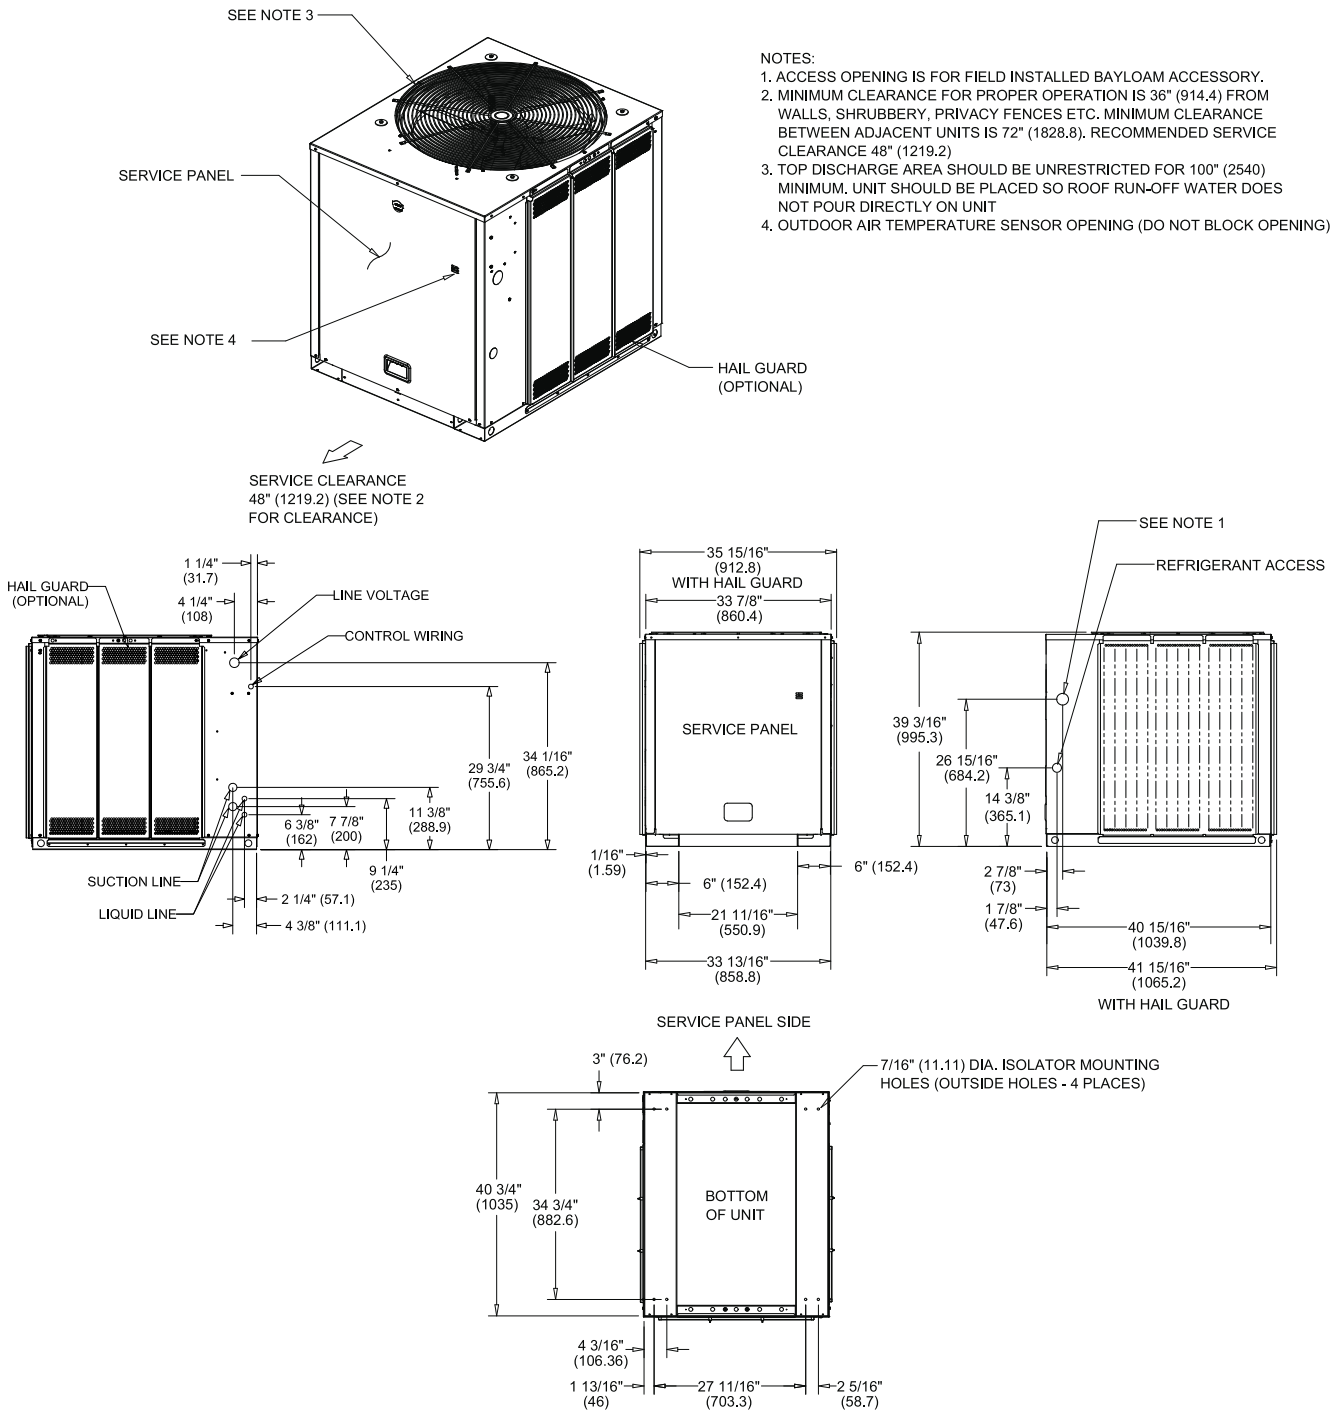



Figure 5. 8.33 and 10 ton condensing unit, single and manifolded compressor. microchannel

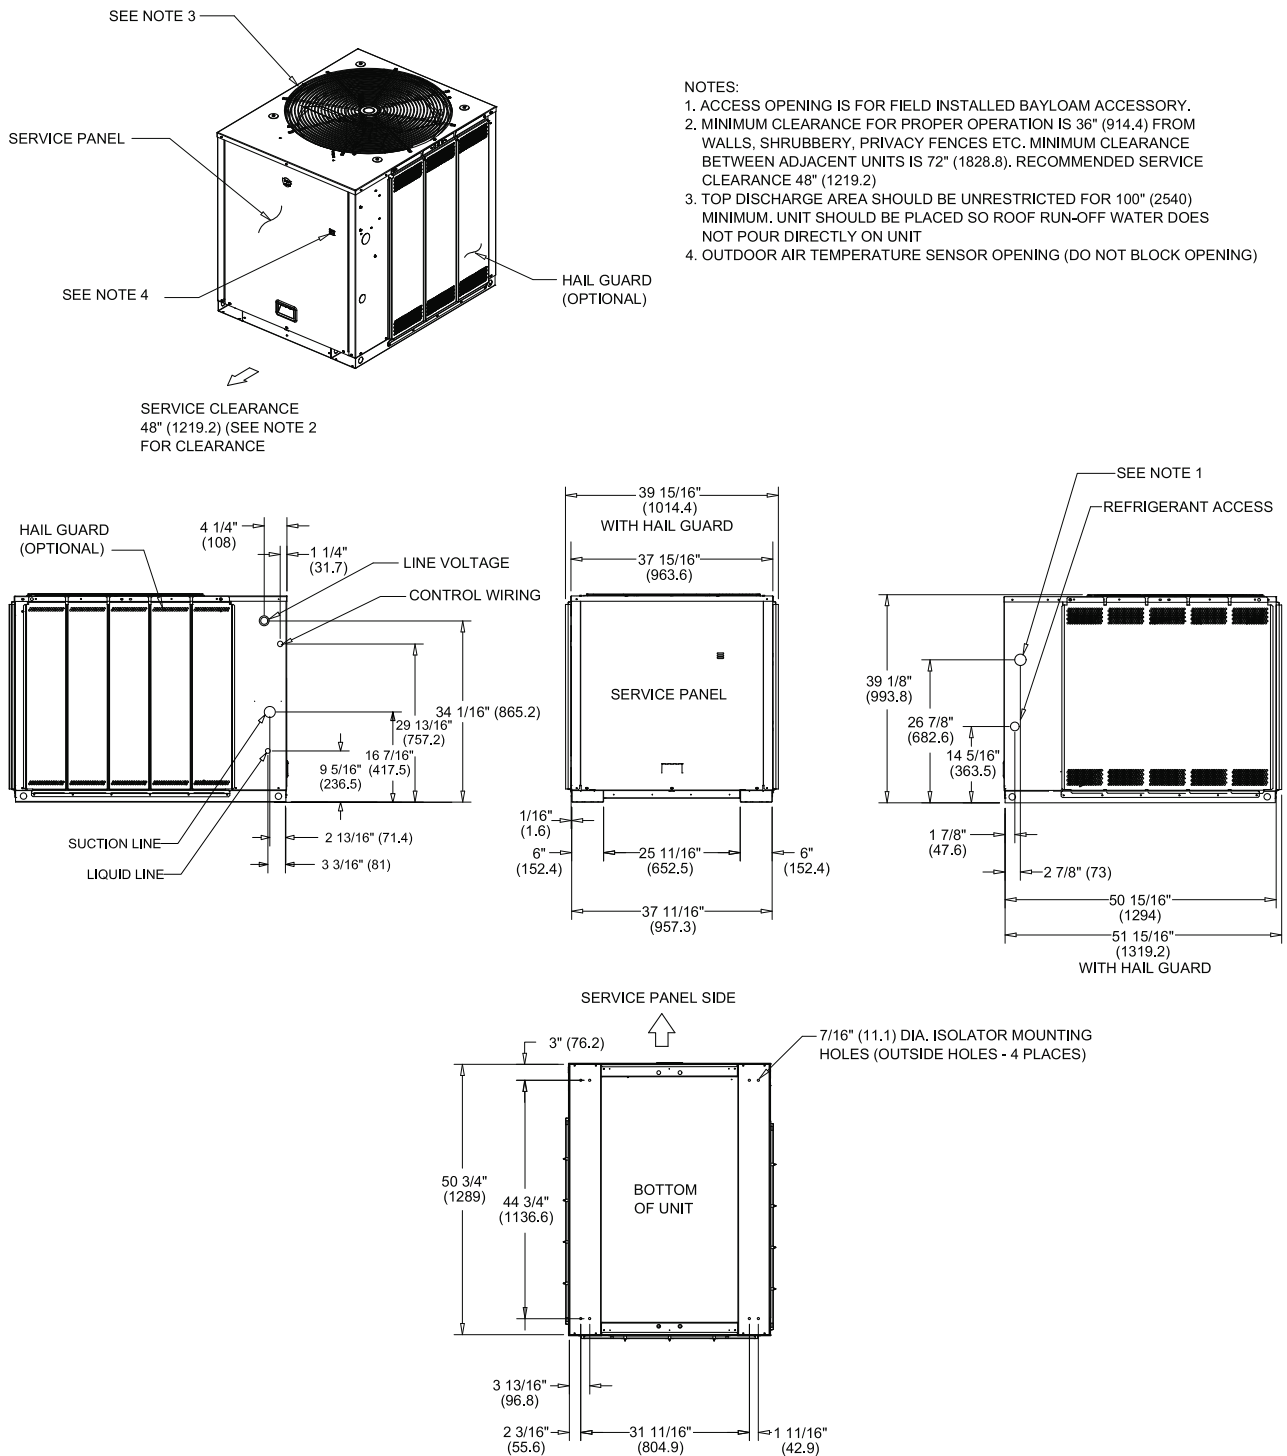

**Figure 6. 8.33 and 10 ton condensing unit, dual compressor, microchannel**

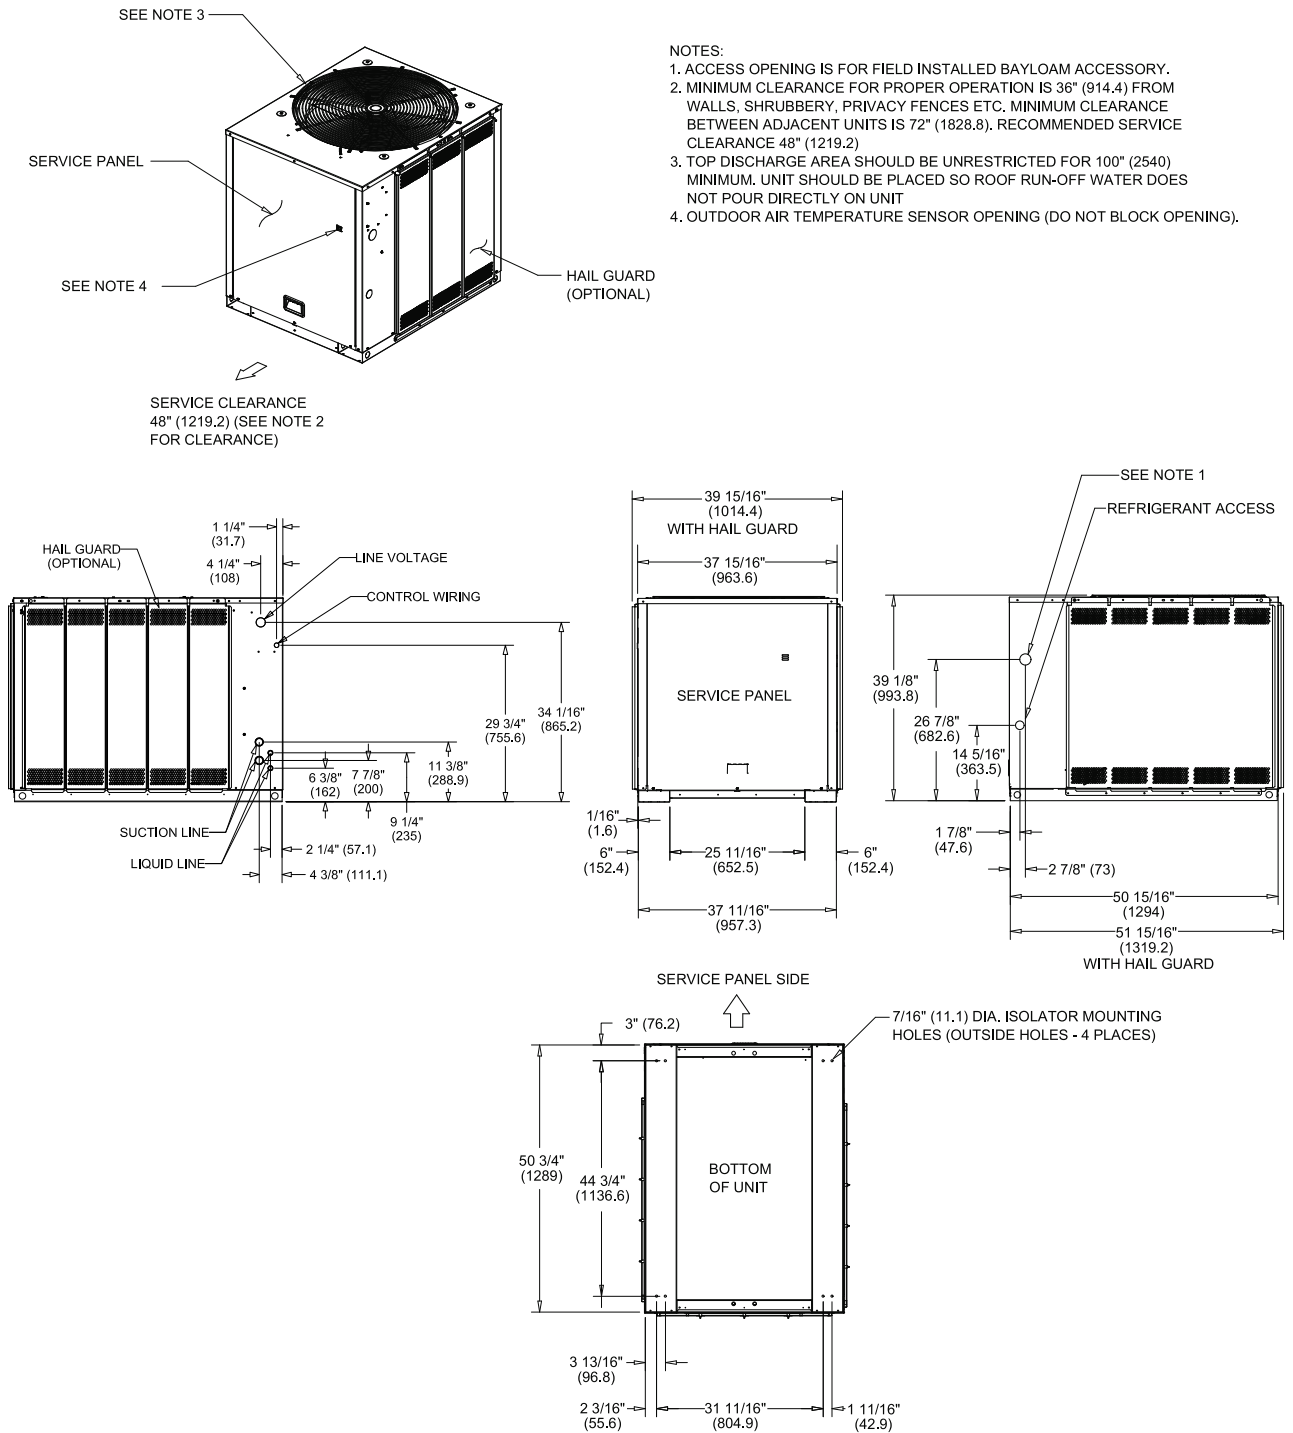


**Figure 7. 10.4 and 12.5 ton condensing unit, dual compressor, microchannel**

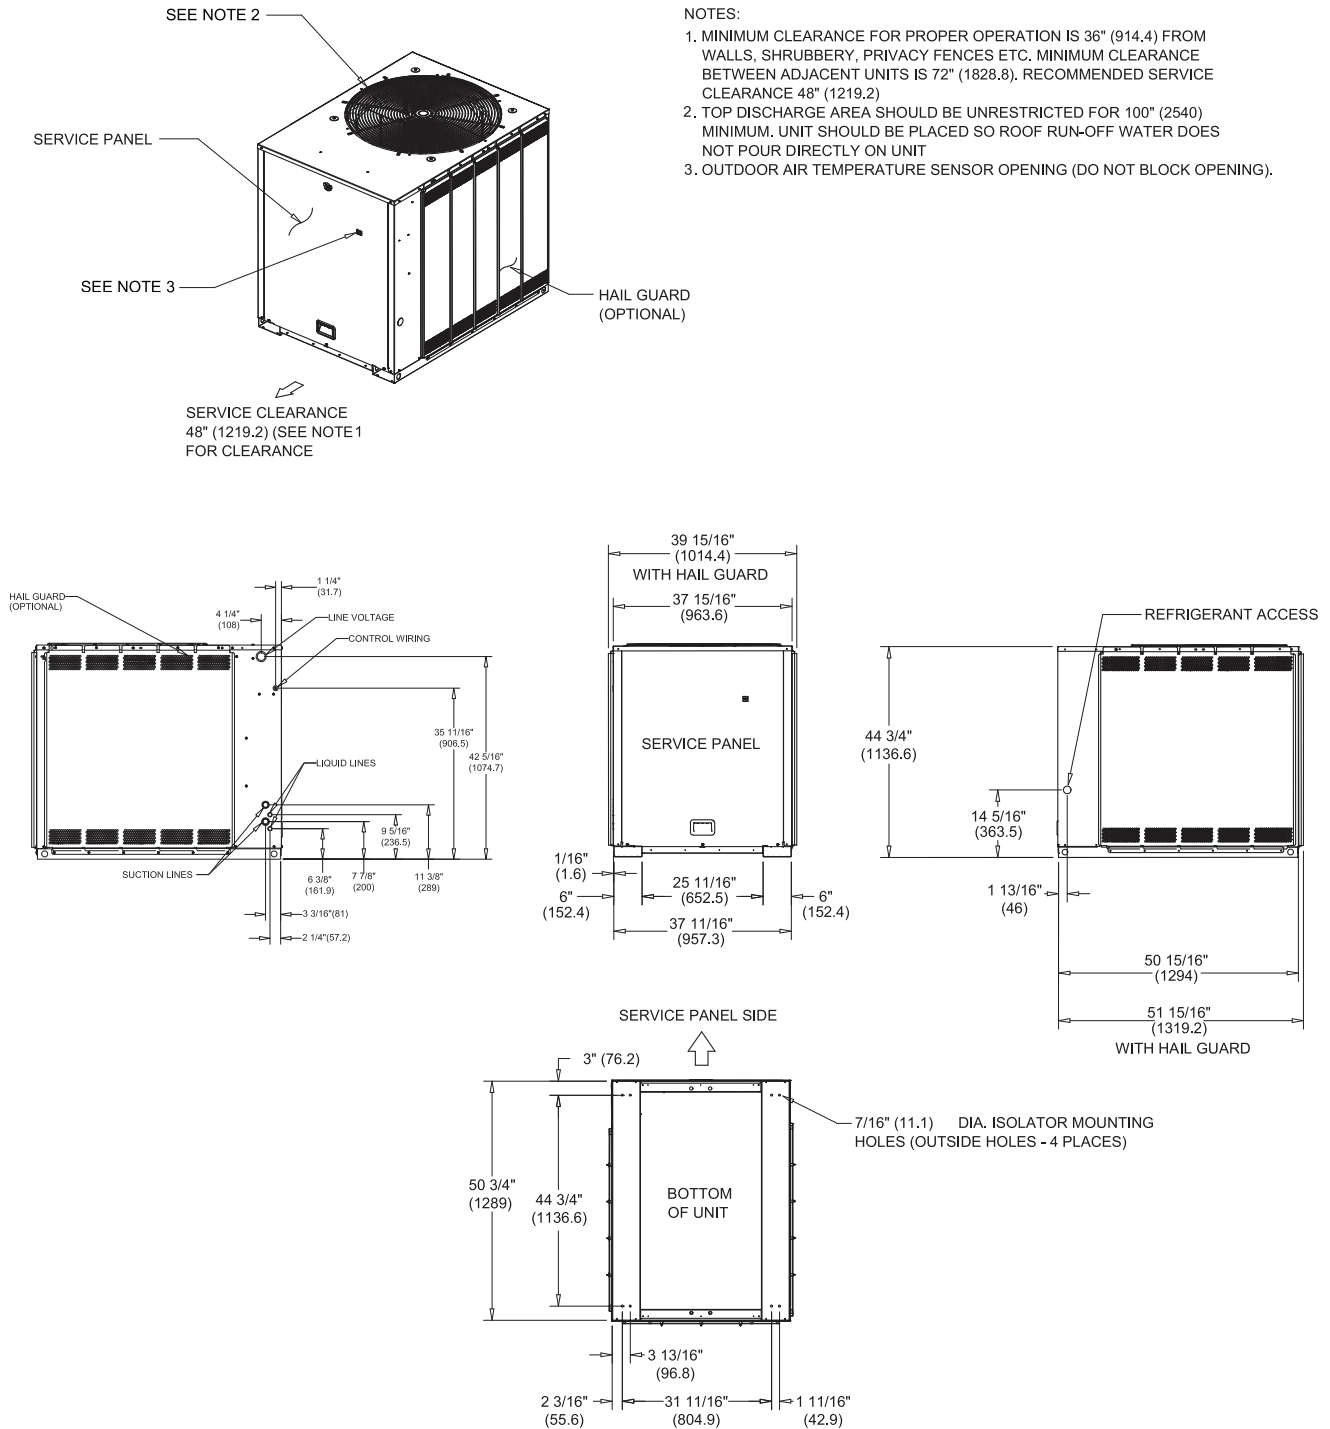


## Dimensional Data

**Figure 8. 13, 15, 16.7 and 20 ton condensing unit, dual compressor, microchannel**

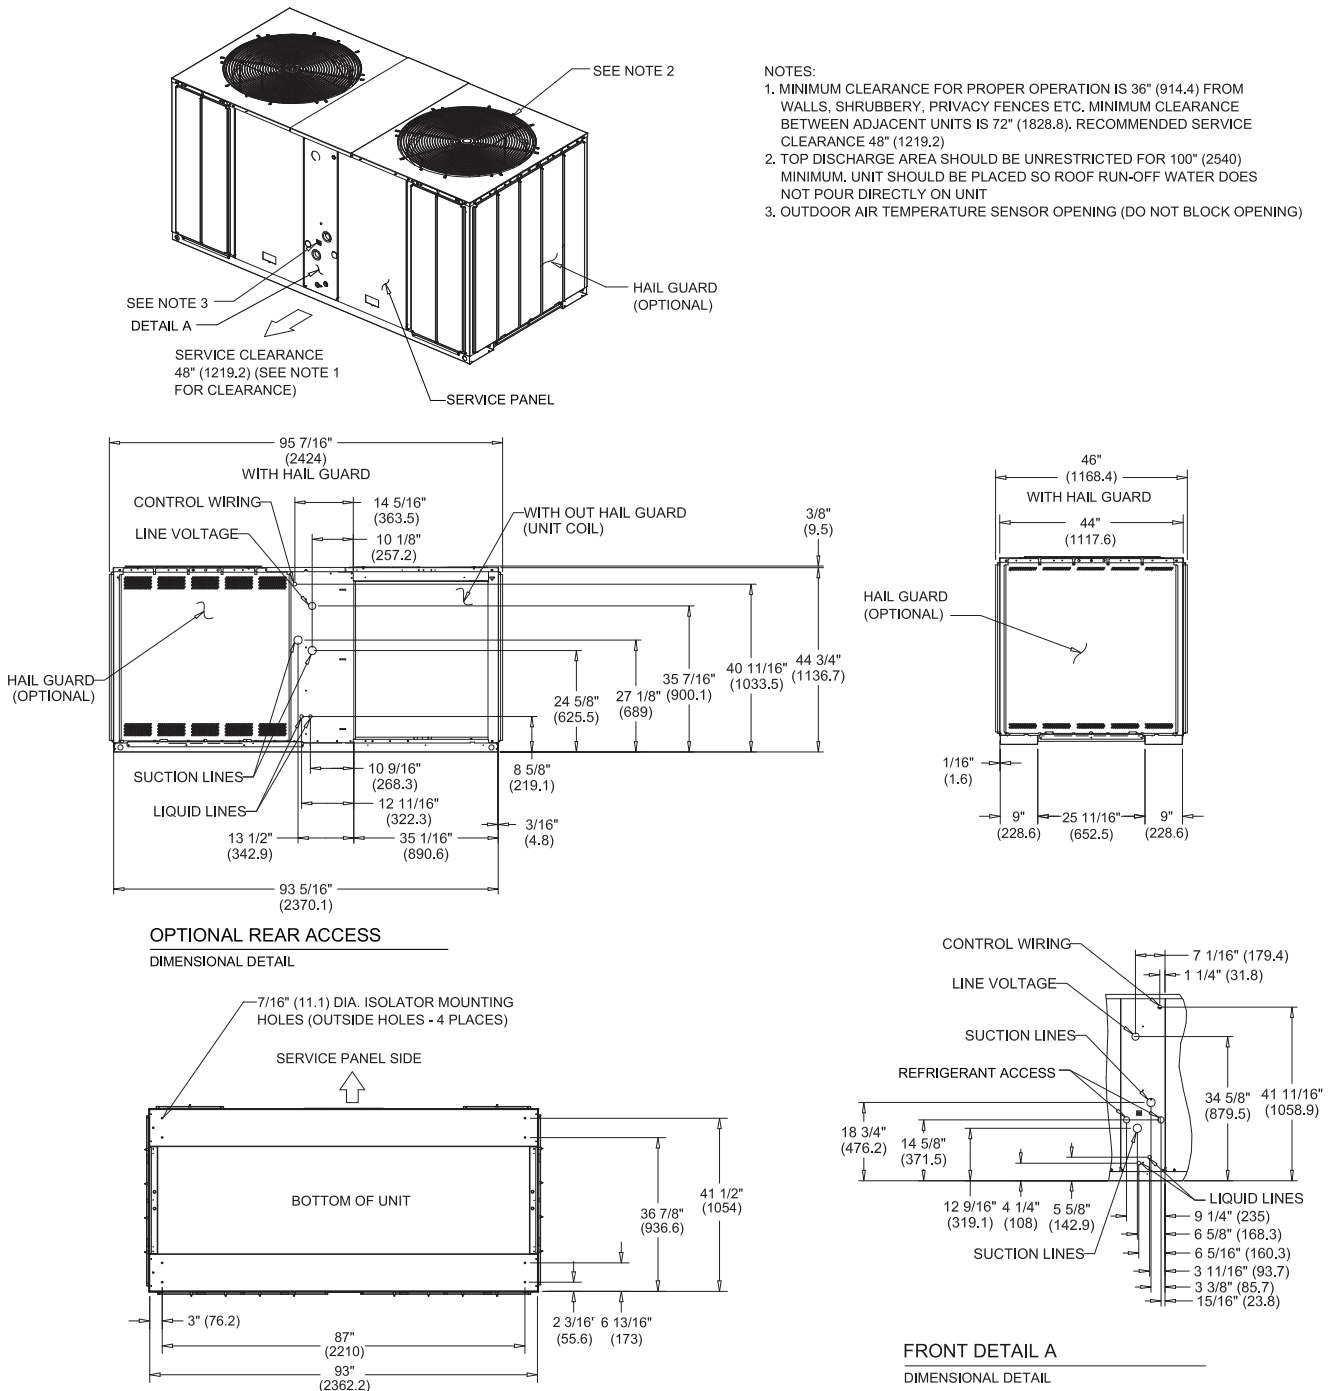


**Figure 9. 13, 15, 16.7 and 20 condensing unit, manifolded compressor, microchannel**

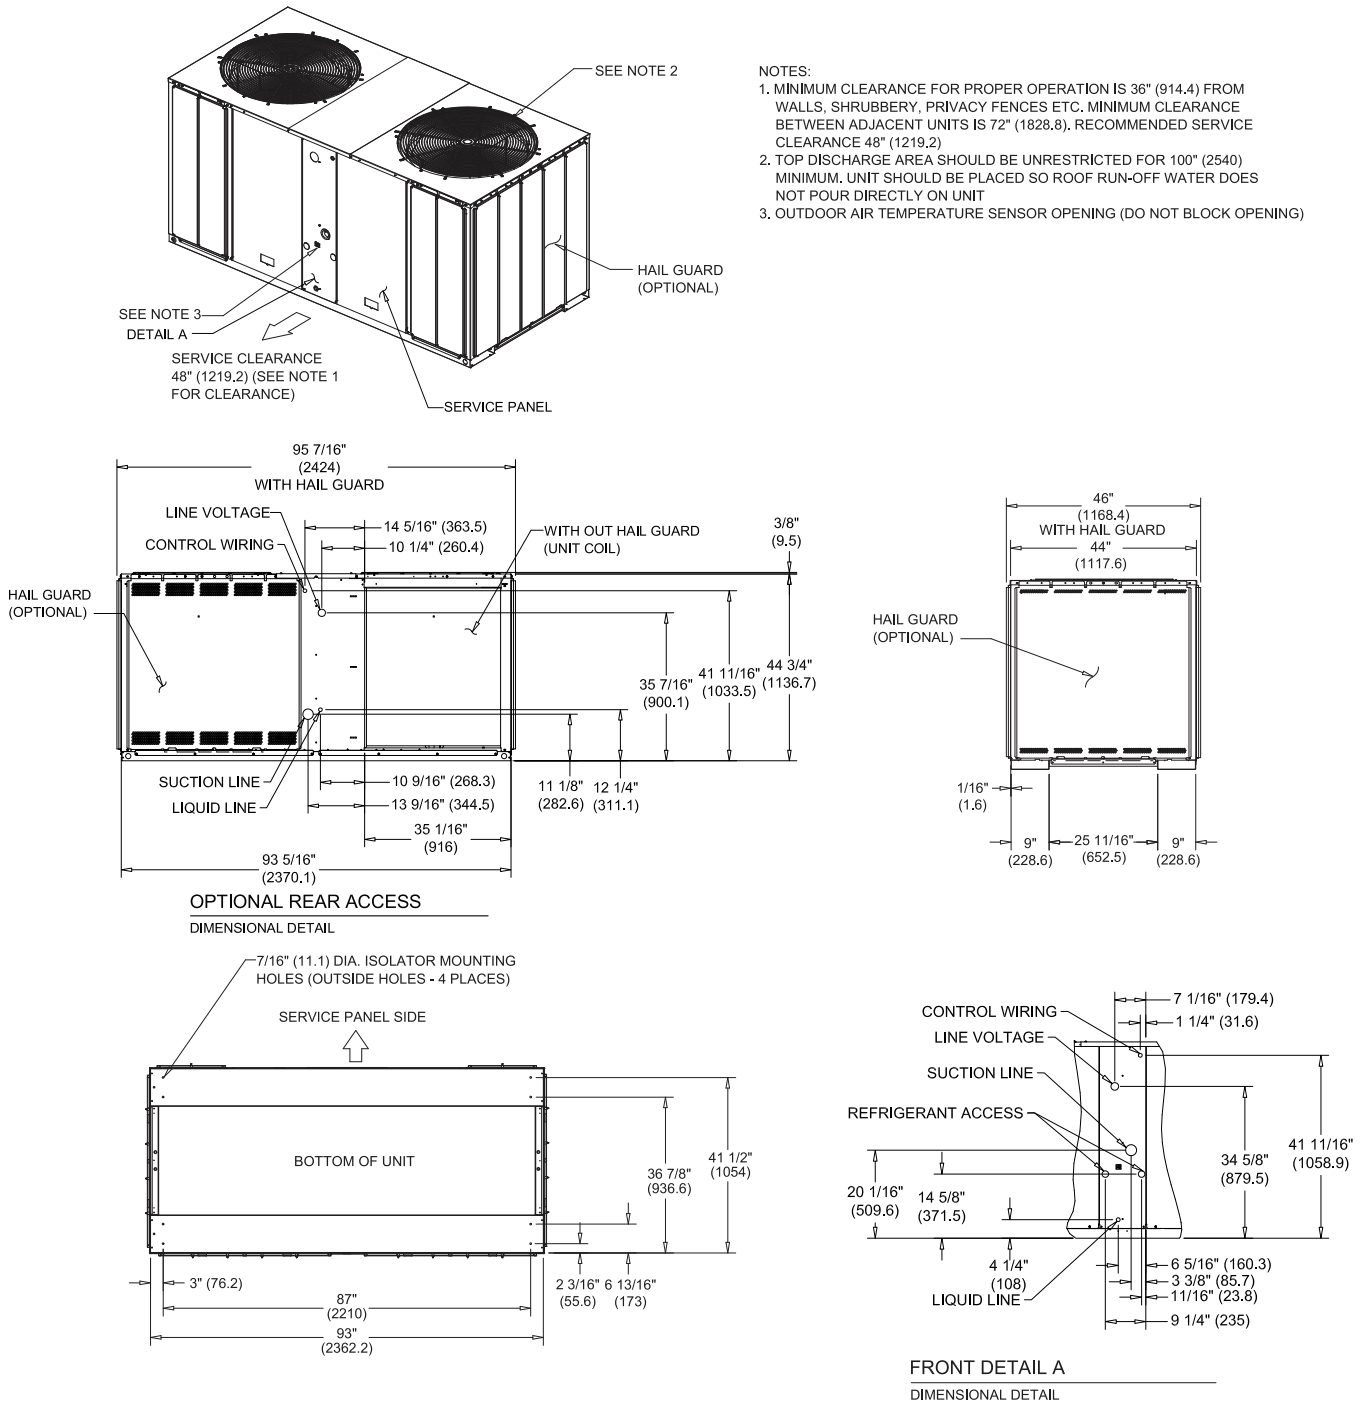

## Dimensional Data

**Figure 10. 20.9 and 25 ton condensing unit, manifolded compressor, microchannel**

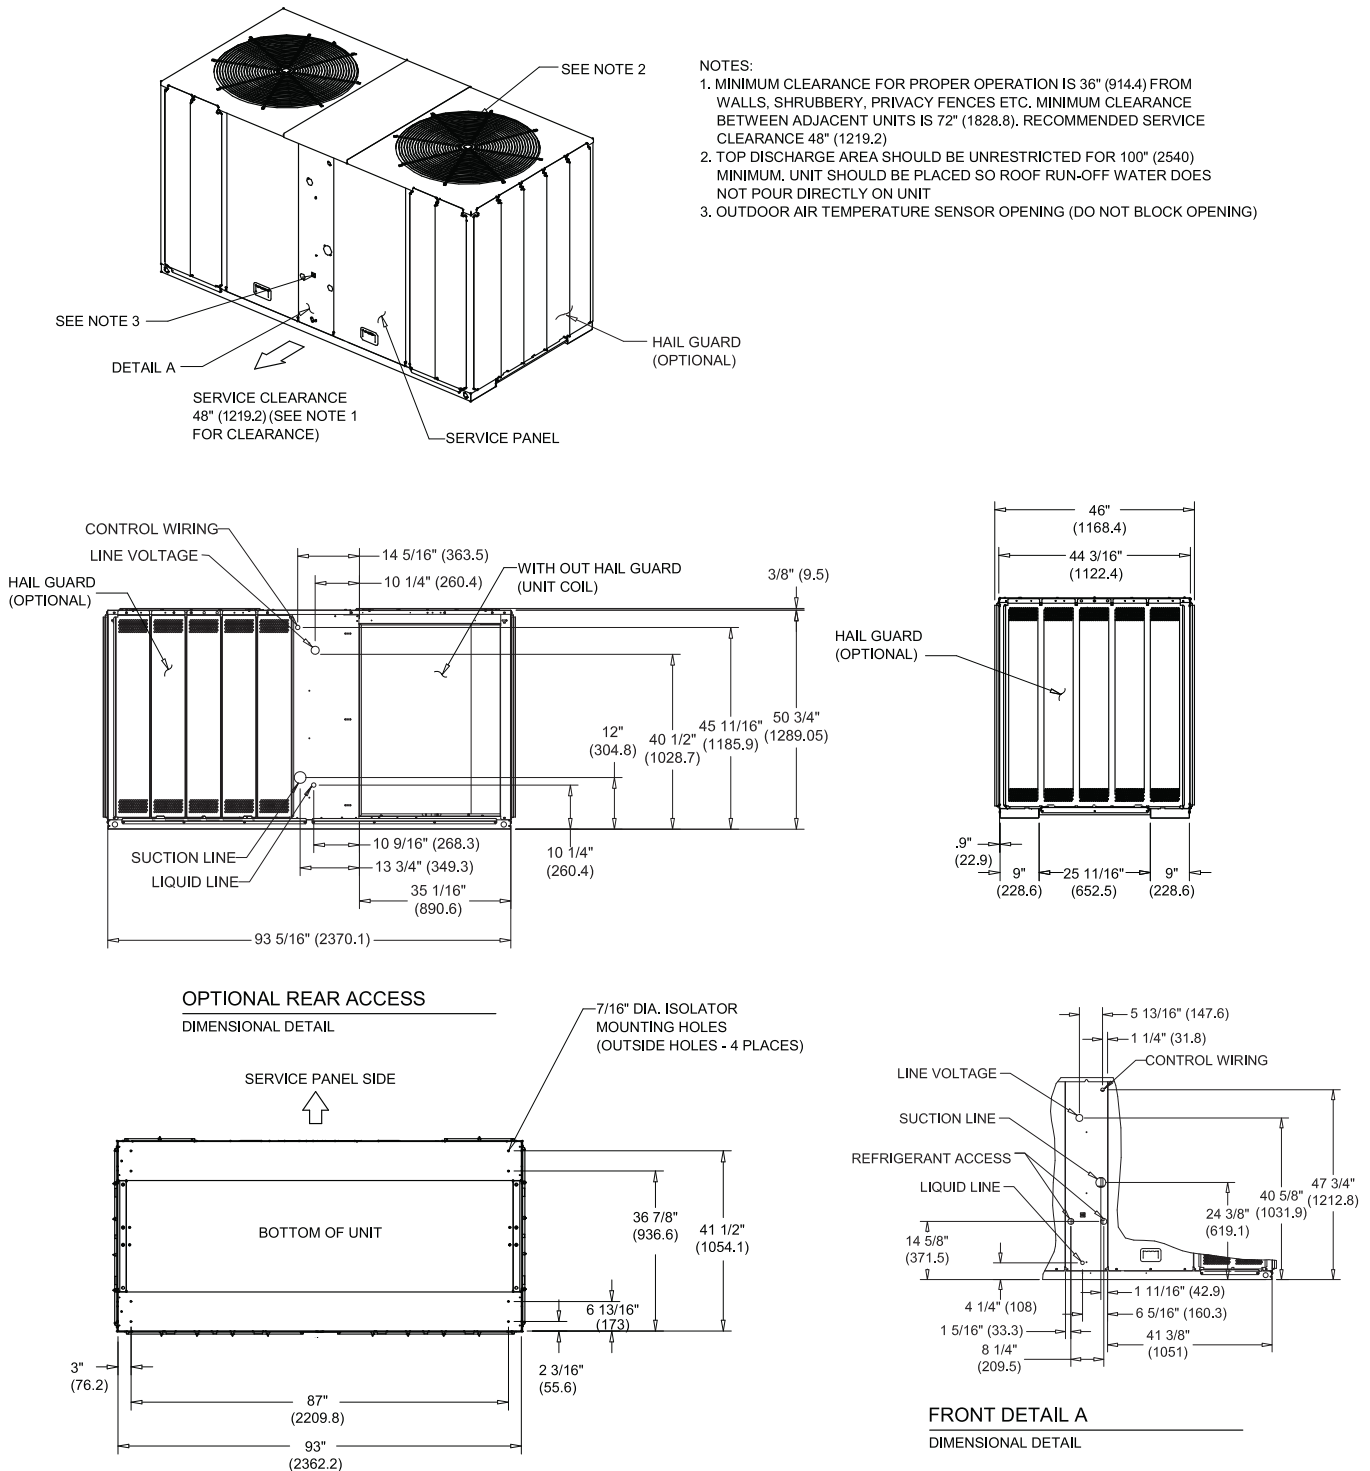

# Weights

## Cooling Condenser

**Table 1. TTA unit and corner weights — lbs (60 Hz)**

Tons	Model No.	Shipping Max (lbs)	Net Max (lbs)	Corner Weights			
				1	2	3	4
6	TTA073G	310	241	68	72	35	65
	TTA073H	348	279	90	82	54	53
7.5	TTA090G	320	251	71	75	37	68
	TTA090H	384	315	99	91	63	62
10	TTA120G	416	340	114	89	60	77
	TTA120H	428	352	110	102	71	69
	TTA120J	474	417	110	168	87	52
12.5	TTA150H	514	457	127	148	77	106
15	TTA180H	750	648	195	226	120	106
	TTA180J	750	648	195	226	120	106
20	TTA240H	904	762	239	218	149	156
	TTA240J	904	762	239	218	149	156
25	TTA300J	969	857	288	241	216	111

**Table 2. TTA unit and corner weights — lbs (50 Hz)**

Tons	Model No.	Shipping Max (kg)	Net Max (kg)	Corner Weights			
				1	2	3	4
5	TTA061G	141	110	31	33	16	30
	TTA061H	158	128	41	38	25	24
6.25	TTA076G	145	115	32	34	17	31
	TTA076H	174	144	45	42	29	28
8.33	TTA101G	189	155	52	40	27	35
	TTA101H	194	160	50	46	32	31
	TTA101J	215	189	50	76	39	24
10.4	TTA126H	233	207	58	67	35	48
13	TTA156H	340	294	89	103	55	48
	TTA156J	340	294	89	103	55	48
16.7	TTA201H	410	346	108	99	68	71
	TTA201J	410	346	108	99	68	71
20.9	TTA251J	440	389	131	109	98	50

Figure 11. TTA073, 090, 120, 150, TTA061, 076, 101


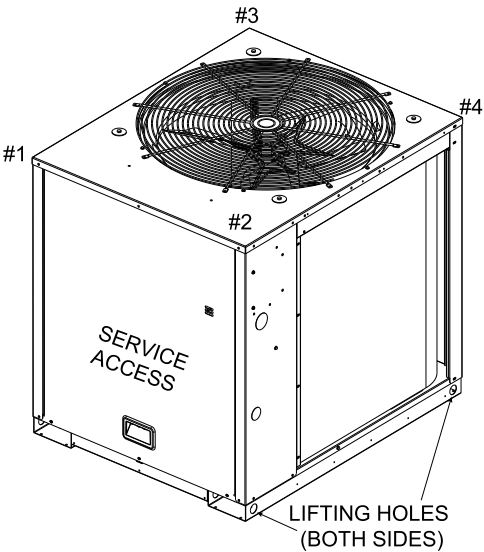



Figure 12. TTA180, 240, 300, TTA156, 201, 251

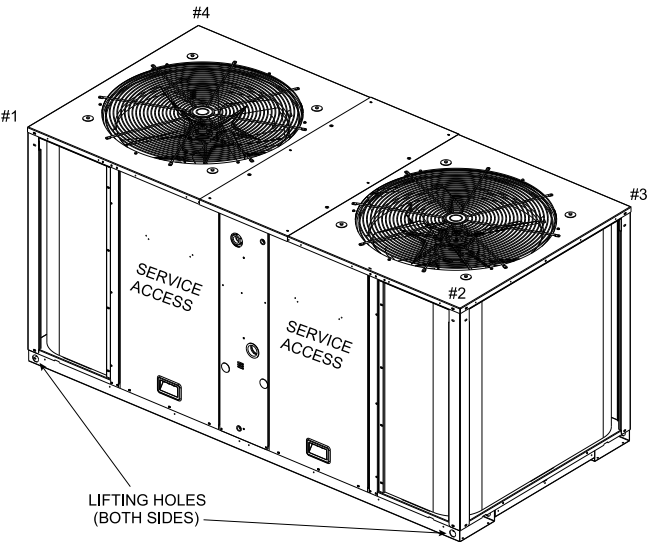


# Installation

## Refrigerant Piping Guidelines

**Figure 13. Allowable elevation difference: TTA *above* indoor unit**

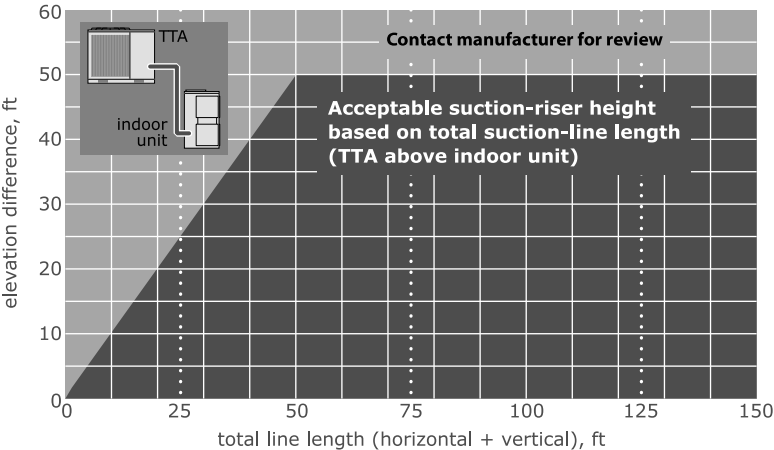

**Figure 14. Allowable elevation difference: TTA or TWA *below* indoor unit**

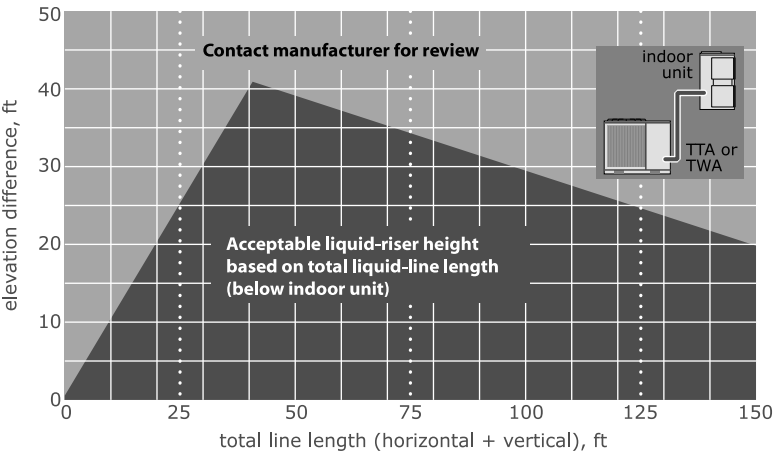

**Note:** Route refrigerant piping for minimum linear length, minimum number of bends and fittings.

## Refrigerant Piping Procedures (Outdoor Units)

### ⚠ WARNING

#### R-410A Refrigerant under Higher Pressure than R-22!

Failure to use proper equipment or components as described below, could result in equipment failing and possibly exploding, which could result in death, serious injury, or equipment damage. The units described in this manual use R-410A refrigerant which operates at higher pressures than R-22. Use **ONLY** R-410A rated service equipment or components with these units. For specific handling concerns with R-410A, please contact your local Trane representative.

### ⚠ WARNING

#### Explosion Hazard!


Failure to follow instructions below could result in an explosion which could result in death or serious injury, and equipment damage.

**NEVER** bypass system safeties in order to pump down the unit component's refrigerant into the microchannel heat exchanger (MCHE) coil. Do **NOT** depress the compressor contactor since it effectively bypasses the high-pressure control.

Each unit ships with a holding charge of dry nitrogen. The nitrogen should be removed and the entire system evacuated (at the proper time) to avoid possible contamination.

1. Remove the compressor service access panel.
2. Locate the liquid and suction line service valves. Check that the piping connection stubs on the valves ([Figure 15](#), [p. 22](#)) line up properly with the holes in the unit cabinet.

Figure 15. Outdoor units - refrigerant piping (with dry nitrogen)

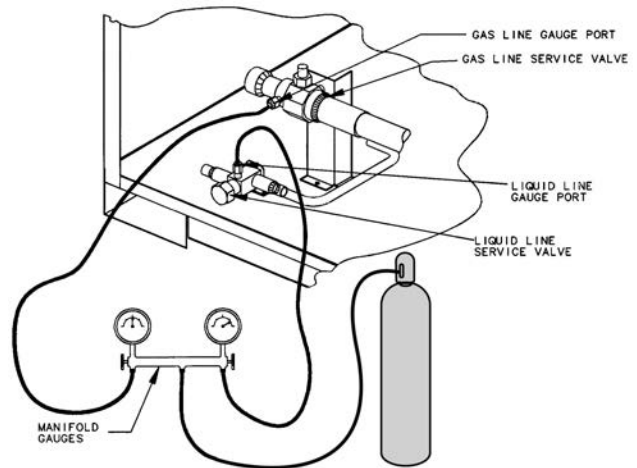

FROM DWG. A668541

3. Remove the refrigerant connection seal caps and open the service valve slowly to release the nitrogen from the unit.

### NOTICE

#### System Component Damage!

Do not remove the seal caps from refrigerant connections, or open the service valves until prepared to braze refrigerant lines to the connections. Excessive exposure to atmosphere (> 5 min.) may allow moisture or dirt to contaminate the system, damaging valve seals and causing ice formation in system components.

### ⚠ WARNING

#### Hazard of Explosion and Deadly Gases!

Failure to follow all proper safe refrigerant handling practices could result in death or serious injury.

**Never** solder, braze or weld on refrigerant lines or any unit components that are above atmospheric pressure or where refrigerant may be present. Always remove refrigerant by following the guidelines established by the EPA Federal Clean Air Act or other state or local codes as appropriate. After refrigerant removal, use dry nitrogen to bring system back to atmospheric pressure before opening system for repairs. Mixtures of refrigerants and air under pressure may become combustible in the presence of an ignition source leading to an explosion. Excessive heat from soldering, brazing or welding with refrigerant vapors present can form highly toxic gases and extremely corrosive acids.

4. Cut, fit and braze tubing, starting at the outdoor unit

and work toward the indoor unit. See recommended tube sizes, .

**Note:** Use long radius ells for all 90° bends.

All brazing should be done using a 2 to 3 psig dry nitrogen purge flowing through the pipe being brazed, see [Figure 15, p. 22](#).

### NOTICE

#### System Component Damage!

Install a regulating valve between the nitrogen source and the gauge manifold. Unregulated pressure can damage system components.

### NOTICE

#### System Component Damage!

Wet-wrap all valves and protect painted surfaces from excessive heat. Heat can damage system components and the unit finish.

5. Shut off nitrogen supply. Shut off the manifold valve for the line that is connected to the suction line service valve. Disconnect the line from the gauge port on the valve.

## Refrigerant Piping Procedures (Indoor Unit)

Once liquid and suction lines are complete to the refrigerant connections on the indoor unit, remove the gauge port core(s) on the indoor unit connection stubs to release the dry nitrogen charge.

### NOTICE

#### Unit Damage!

Do not apply heat to remove seal caps until the gauge port cores have been removed. If seal caps are intact, application of heat may generate excessive pressure in the unit and result in damage to the coil or expansion valve.

1. Remove both seal caps from the indoor unit connection stubs.

### NOTICE

#### Unit Damage!

Do not remove the seal caps from refrigerant connections, or open the service valves until prepared to braze refrigerant lines to the connections. Due to the high hygroscopic properties of the R-410A oil, excessive exposure to atmosphere will allow moisture to contaminate the system, damaging the compressor.

2. Turn on nitrogen supply. Nitrogen enters through the liquid line gauge port.
3. Braze the liquid line connections.

4. Open the gauge port on the suction line and then braze the suction line to the connection stub. Nitrogen will bleed out the open gauge port on the suction line.
5. Shut off nitrogen supply.

## Leak Check

### ⚠ WARNING

#### Hazard of Explosion!

Failure to follow these instructions could result in death or serious injury or equipment or property-only damage.

Use only dry nitrogen with a pressure regulator for pressurizing unit. Do not use acetylene, oxygen or compressed air or mixtures containing them for pressure testing. Do not use mixtures of a hydrogen containing refrigerant and air above atmospheric pressure for pressure testing as they may become flammable and could result in an explosion. Refrigerant, when used as a trace gas should only be mixed with dry nitrogen for pressurizing units.

### ⚠ WARNING

#### Hazard of Explosion!

Failure to follow recommended safe leak test procedures could result in death or serious injury or equipment or property-only-damage.

Never use an open flame to detect gas leaks. Use a leak test solution for leak testing.

After the brazing operation of refrigerant lines to both the outdoor and indoor unit is completed, the field brazed connections must be checked for leaks. Pressurize the system through the service valve with dry nitrogen to 200 psi. Use soap bubbles or other leak-checking methods to ensure that all field joints are leak free. If not, release pressure, repair and repeat leak test.

## System Evacuation

1. After completion of leak check, evacuate the system.
2. Attach appropriate hoses from manifold gauge to gas and liquid line pressure taps.
 

**Note:** Unnecessary switching of hoses can be avoided and complete evacuation of all lines leading to sealed system can be accomplished with manifold center hose and connecting branch hose to a cylinder of R-410A and vacuum pump.
3. Attach center hose of manifold gauges to vacuum pump.

### NOTICE

#### Operating Under Vacuum!

Failure to follow these instructions will result in compressor failure.

Do not operate or apply power to the compressor while under a vacuum.

- Evacuate the system to hold a 500 micron vacuum.
- Close off valve to vacuum pump and observe the micron gauge. If gauge pressure rises above 500 microns in one minute, then evacuation is incomplete or the system has a leak.
- If vacuum gauge does not rise above 500 microns in 10 minutes, the evacuation should be complete.

### NOTICE

#### Equipment Damage!

Charge with access port on the liquid line service valve only.

- With vacuum pump and micron gauge blanked off, open valve on R-410A cylinder and allow refrigerant pressure to build up to about 80 psig.
- Close valve on the R-410A supply cylinder. Close valves on manifold gauge set and remove refrigerant charging hoses from liquid and gas gauge ports.
- Leak test the entire system. Using proper procedures and caution, as described in the previous section, repair any leaks found and repeat the leak test.

## Insulating and Isolating Refrigerant Lines

Insulate the entire suction line with refrigerant piping insulation. Also insulate any portion of the liquid line exposed to temperature extremes. Insulate and isolate liquid and suction lines from each other. Isolate refrigerant lines from the structure and any duct work.

#### Important:

- To prevent possible noise or vibration problems, be certain to isolate refrigerant lines from the building.
- All suction and hot gas bypass piping (if installed) should be insulated from the termination in the air handler to the condensing unit cabinet entry. Failure to do so can cause condensate drip off and performance degradation.
- Prior to starting a unit, it is advisable to have the approved oils available in the event oil needs to be added to the system.

### NOTICE

#### Equipment Damage!

This is POE oil, which readily absorbs moisture. Always use new oil and never leave containers open to atmosphere while not in use.

Table 3. TTA approved oils

Unit Model Number	Approved Oils
TTA061, TTA073, TTA076, TTA090, TTA101H/J, TTA120H/J, TTA126, TTA150, TTA156, TTA180,	Trane Oil Part Number OIL00094 (1 quart container)
TTA101G, TTA120G, TTA201, TTA240, TTA251, TTA300	Trane Oil Part Number OIL00079 (1 quart container) or OIL00080 (1 gallon container)

For units equipped with compressors containing site glasses, the oil level must be visible through the sight glass when the compressor is running under stabilized conditions and a few minutes after the compressor has stopped.

## Refrigerant Charging Procedure

If charging by weight, refer to for starting charge. If refrigerant adjustments are needed because of length of line, refer to ["Charging Charts and Superheat," p. 37](#).

Charge by weight through the gauge port on the liquid line. Once the charge enters the system, backseat (open) the liquid line service valve and disconnect the charging line and replace the cap on the gauge port.

#### Notes:


- R-410A should only be charged in the liquid state.
- When possible, always charge the refrigerant into the liquid line of the unit.
- If the entire charge can't be charged into the liquid line, the balance of the unit charge can be metered through a charging manifold set as liquid — preferably through a schrader valve into the suction line to the compressor — only while the compressor is running.
- Check and adjust superheat using [Table 9, p. 40](#), then re-check charging charts to determine if charge corrections are necessary.

### NOTICE

#### Equipment Damage!

Never charge liquid refrigerant into the suction line of the unit with the compressor off.

**Figure 16. Outdoor units - refrigerant piping**

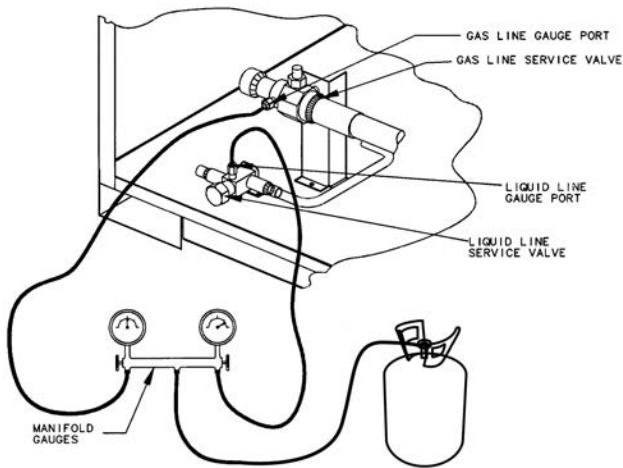

## Charging Levels

**Table 4. Estimated charge levels at ARI rated line lengths (25 feet) - 50 & 60 Hz**

Matched Set	Refrigerant Charge		Per Circuit	
	Circuit 1	Circuit 2	Liquid Line Diameter	Vapor Line Diameter
TTA061G w/TWE076D <sup>(a)</sup>	10	N/A	0.5 (1/2")	1.125 (1 1/8")
TTA061H w/TWE073E	7.0	7.0	0.5 (1/2")	0.875 (7/8")
TTA073G w/TWE090D <sup>(a)</sup>	10	N/A	0.5 (1/2")	1.125 (1 1/8")
TTA073H w/TWE073E	7.0	7.0	0.5 (1/2")	0.875 (7/8")
TTA076G w/TWE076D	9.7	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA076H w/TWE076E	7.25	7.3125	0.5 (1/2")	1.125 (1 1/8")
TTA090G w/TWE090D	9.7	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA090H w/TWE090E	7.25	7.3125	0.5 (1/2")	1.125 (1 1/8")
TTA101G w/TWE101D	13.6	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA101H w/TWE101E	7.7	7.6	0.5 (1/2")	1.125 (1 1/8")
TTA101J w/TWE101D	13.1	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA120G w/TWE120D	13.6	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA120H w/TWE120E	7.7	7.6	0.5 (1/2")	1.125 (1 1/8")
TTA120J w/TWE120D	13.1	N/A	0.5 (1/2")	1.375 (1 3/8")
TTA126H w/TWE126E	9.8	9.8	0.5 (1/2")	1.125 (1 1/8")
TTA150H w/TWE150E	9.8	9.8	0.5 (1/2")	1.125 (1 1/8")
TTA156H w/TWE156E	11.5	11.5	0.5 (1/2")	1.375 (1 3/8")
TTA156J w/TWE156E	21.3	N/A	0.625 (5/8")	1.625 (1 5/8")
TTA180H w/TWE180E	11.5	11.5	0.5 (1/2")	1.375 (1 3/8")
TTA180J w/TWE180E	21.3	N/A	0.625 (5/8")	1.625 (1 5/8")
TTA201H w/TWE201E	11.6	12.0	0.5 (1/2")	1.375 (1 3/8")
TTA201J w/TWE201E	23.8	N/A	0.625 (5/8")	1.625 (1 5/8")

**Table 4. Estimated charge levels at ARI rated line lengths (25 feet) - 50 & 60 Hz (continued)**

Matched Set	Refrigerant Charge		Per Circuit	
	Circuit 1	Circuit 2	Liquid Line Diameter	Vapor Line Diameter
TTA240H w/TWE240E	11.6	12.0	0.5 (1/2")	1.375 (1 3/8")
TTA240J w/TWE240E	23.8	N/A	0.625 (5/8")	1.625 (1 5/8")
TTA251J w/TWE251E <sup>(b)</sup>	29.8	N/A	0.625 (5/8")	2.125 (2 1/8")
TTA300J w/TWE300E <sup>(b)</sup>	29.8	N/A	0.625 (5/8")	2.125 (2 1/8")


**Notes:**

1. For line lengths other than 25', please refer to the Application Guide (SS-APG008\*-EN) for charge levels and line sizes.
2. See Figure 17, p. 26 and Figure 18, p. 27 for transition tube location and electrical connections.
3. For additional support with line lengths or refrigerant charge, refer to the Application Guide or contact Product Support.

<sup>(a)</sup> TTA061G and TTA073G need a reducer for vapor line. (1.375 to 1.125 inch) (1 3/8" to 1 1/8").


<sup>(b)</sup> TTA251J and TTA300J are provided with a transition tube to be installed outside of the unit for front or rear access, (1.625 to 2.125 inch) (1 5/8" to 2 1/8").

**Figure 17. TTA 251, 300 transition tube location**

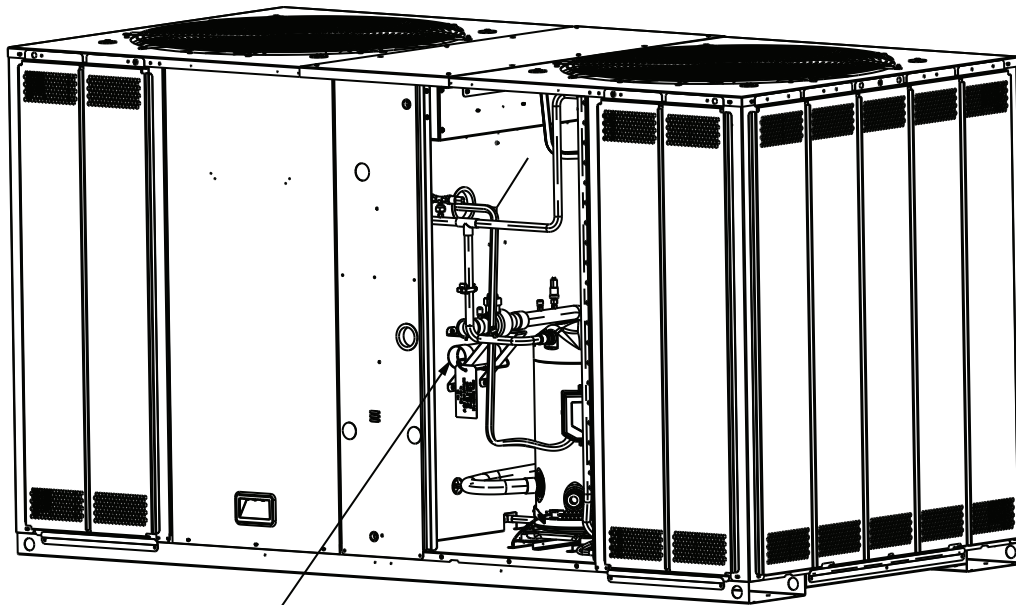

Suction Line Transition Tube

**Figure 18. TTA251, 300 rear refrigerant and electrical connections**

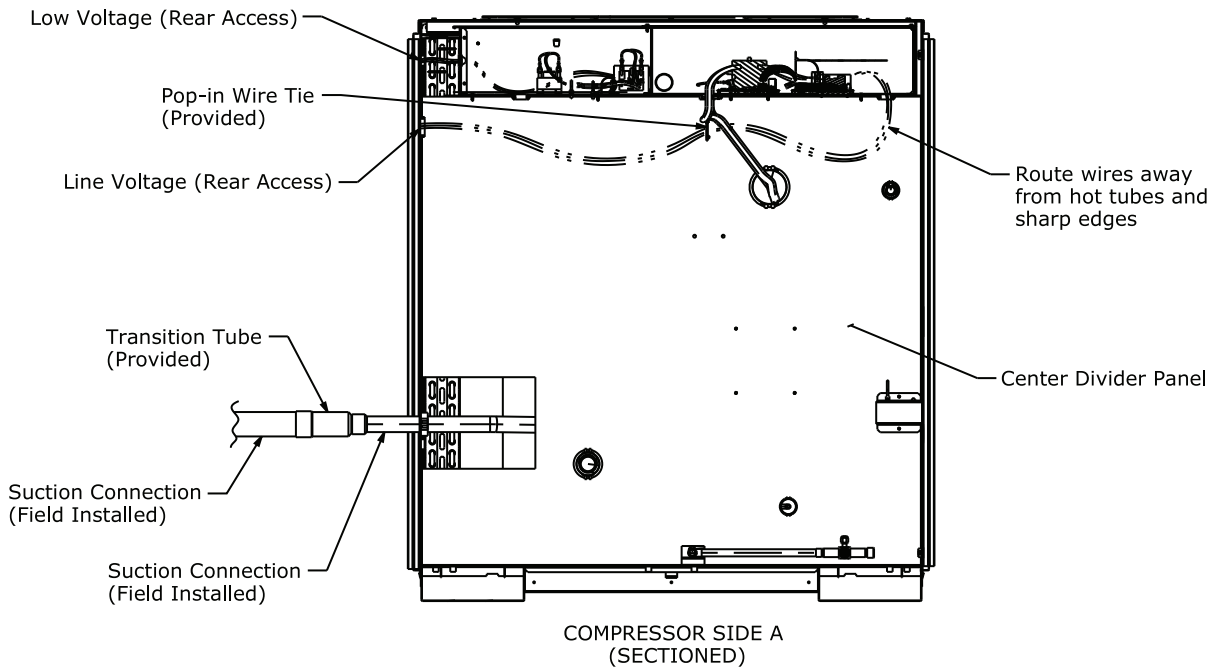

## Liquid Charging

This procedure is accomplished with the unit operating. Electrical connections must be complete. Do not proceed until the system is ready to operate.

**Note:** The compressor access panel must be installed when the unit is running and being charged. Manifold hoses must be routed through refrigerant gauge access hole(s). See "Dimensional Data," p. 10 for specific locations.

### ⚠ WARNING

#### Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

1. Turn on power to the unit. Allow the system to run for 15 minutes to stabilize operating conditions.
2. Measure airflow across the indoor coil. Compare the measurements with the fan performance data in the Data/Submittal or Service Facts. Once proper airflow is established, compare discharge pressure and liquid temperature to the "Charging Charts," p. 37. Add or remove refrigerant (liquid only) as required to obtain correct discharge pressure and liquid temperature.
3. Check suction line superheat and condenser sub-

cooling to ensure the unit is operating properly.

4. Disconnect all power to the unit.

**Important:** If the unit is charged and left without power until a later date, the crankcase heater should be energized for a minimum of 8 hours prior to powering the compressor(s).

### ⚠ WARNING

#### Hazardous Voltage w/Capacitors!

Failure to disconnect power and discharge capacitors before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects and discharge all motor start/run capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power cannot be inadvertently energized. For variable frequency drives or other energy storing components provided by Trane or others, refer to the appropriate manufacturer's literature for allowable waiting periods for discharge of capacitors. Verify with an appropriate voltmeter that all capacitors have discharged.

**For additional information regarding the safe discharge of capacitors, see PROD-SVB06\*-EN.**

5. Remove the charging system from the unit.
6. Replace all panels.

## Electrical Wiring

### ⚠ WARNING

#### Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses **FIRE** and **ELECTROCUTION** hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state electrical codes.

Field wiring consists of providing power supply to the unit, installing the system indoor thermostat and providing low voltage system interconnecting wiring. Access to electrical connection locations is shown in "Dimensional Data," p. 10. Determine proper wire sizes and unit protective fusing requirements by referring to the unit nameplate and/or the unit Service Facts. Field wiring diagrams for accessories are shipped with the accessory.

### Unit Power Supply

The installer must provide line voltage circuit(s) to the unit main power terminals as shown by the unit wiring diagrams (available through e-Library or by contacting a local sales office) or field wiring. Power supply must include a disconnect switch in a location convenient to the unit. Ground the unit according to local codes and provide flexible conduit if codes require and/or if vibration transmission may cause noise problems.

**Important:** All wiring must comply with applicable local and national (NEC) codes. Type and location of disconnect switches must comply with all applicable codes.

### ⚠ WARNING

#### Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses **FIRE** and **ELECTROCUTION** hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state electrical codes.

### NOTICE

#### Use Copper Conductors Only!

Failure to use copper conductors could result in equipment damage as unit terminals are not designed to accept other types of conductors.

### Low Voltage Wiring

Mount the indoor thermostat, zone sensor, or Night Setback Panel (NSB) in accordance with the corresponding thermostat installation instructions. Install color-coded, weather-proof, multi-wire cable according to the field wiring schematics (see "Field Wiring," p. 29).


### Electromechanical Controls

Wiring shown with dashed lines is to be furnished and installed by the customer. All customer supplied wiring must be copper only and must conform to NEC and local electrical codes. Codes may require line of sight between disconnect switch and unit.

**Note:** When electric heater accessory is used, single point power entry or dual point power entry is field optional. Single point power entry option is through electric heater only.

**Important:** For the EDC switch to be functional and thereby facilitate reliable unit operation, make the EDC connections from the indoor to the outdoor control boxes.

**Figure 19. Electromechanical jobsite connections**

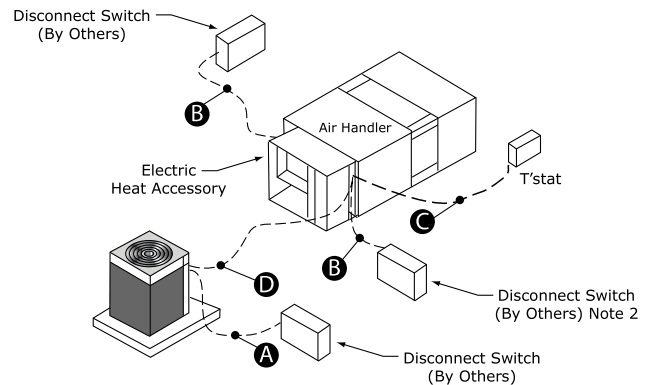

- A. 3 power wires, line voltage for 3 phase, (2 power wires for single phase)
- B. 3 power wires, line voltage for 3 phase, (2 power wires for single phase)
- C. Cooling only thermostat: 3 to 7 wires depending on stages of electric heat
- D. 3 to 7 wires depending on type of outdoor unit(s)

### ReliaTel Controls


Wiring shown with dashed lines is to be furnished and installed by the customer. All customer supplied wiring must be copper only and must conform to NEC and local electrical codes. Codes may require line of sight between disconnect switch and unit.

**Notes:**

1. When electric heater accessory is used, single point power entry or dual point power entry is field optional. Single point power entry option is through electric heater only.
2. \*\*\*Choose only one of the following; Thermostat, Zone Sensor, or NSB Panel.

**Important:** For the EDC switch to be functional and thereby facilitate reliable unit operation, make the EDC connections from the indoor to the outdoor control boxes.

**Figure 20. ReliaTel jobsite connections**

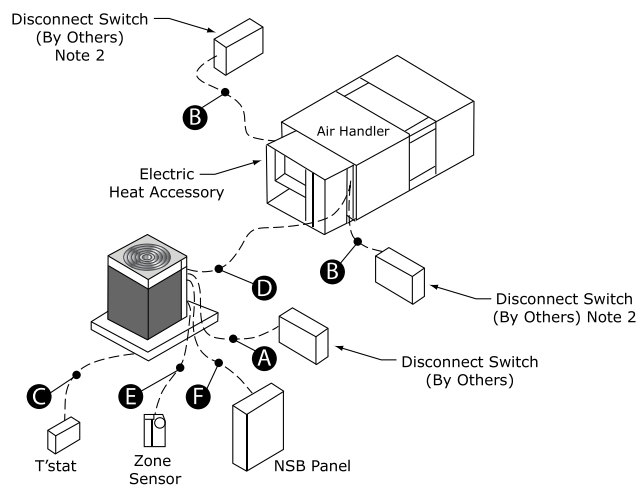

- A. 3 power wires, line voltage for 3 phase, (2 power wires for single phase)
- B. 3 power wires, line voltage for 3 phase, (2 power wires for single phase)
- C. Cooling only thermostat: 3 to 7 wires depending on stages of electric heat
- D. 3 to 7 wires depending on type of outdoor unit(s)
- E. Zone Sensor: 4 to 10 wires depending on zone sensor model<sup>(a)</sup>
- F. Night Setback Panel: 7 wires

<sup>(a)</sup> For SZVAV air handlers: 4 additional wires are required (2 of which require twisted pair or shielded wire) in order to make connections between ReliaTel boards in the condenser and air handler.

## Field Wiring

**Figure 21. Night setback panel field wiring**

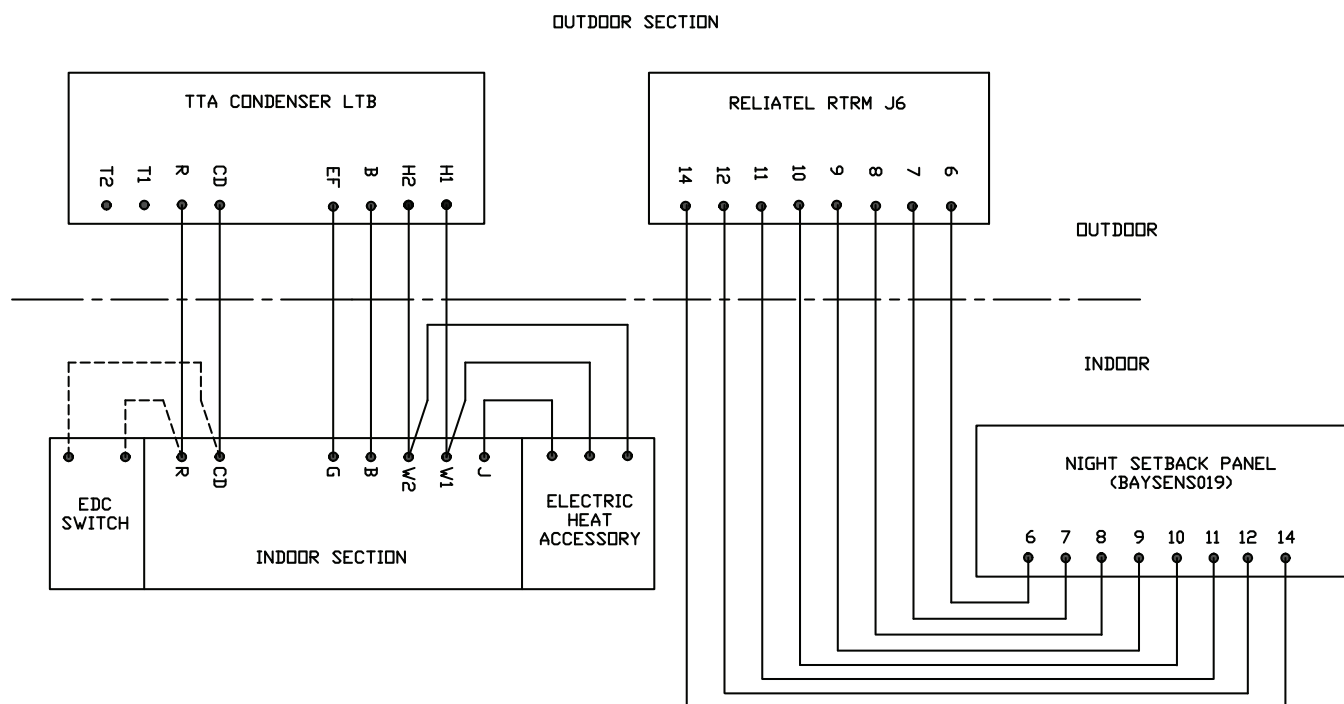


Figure 22. Zone sensor field wiring

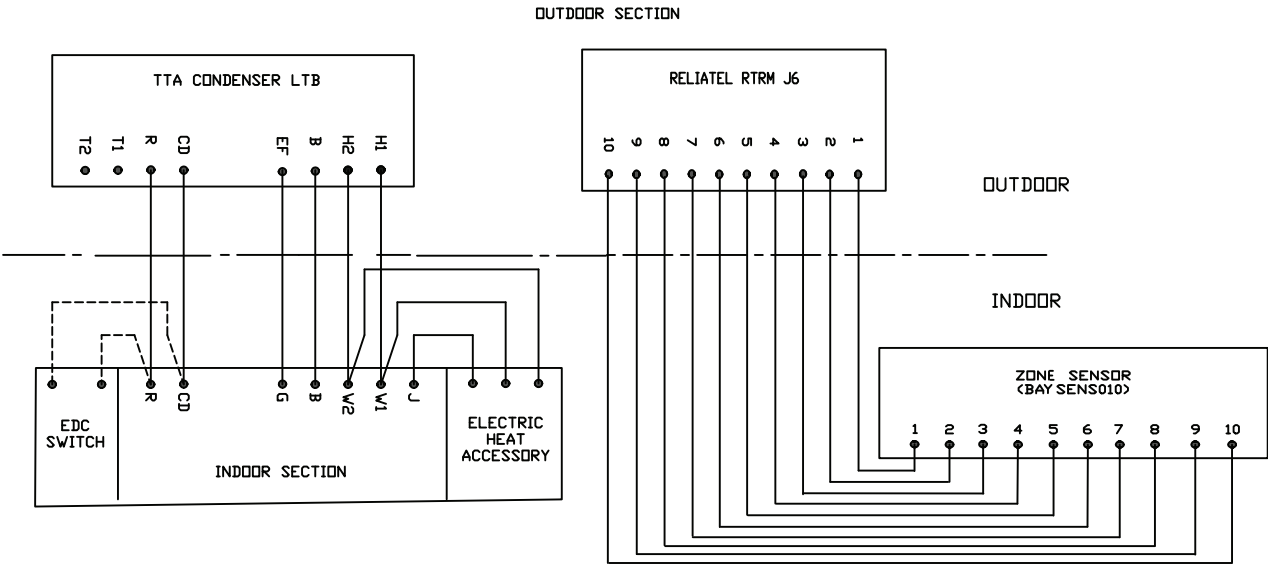


Figure 23. Thermostat field wiring



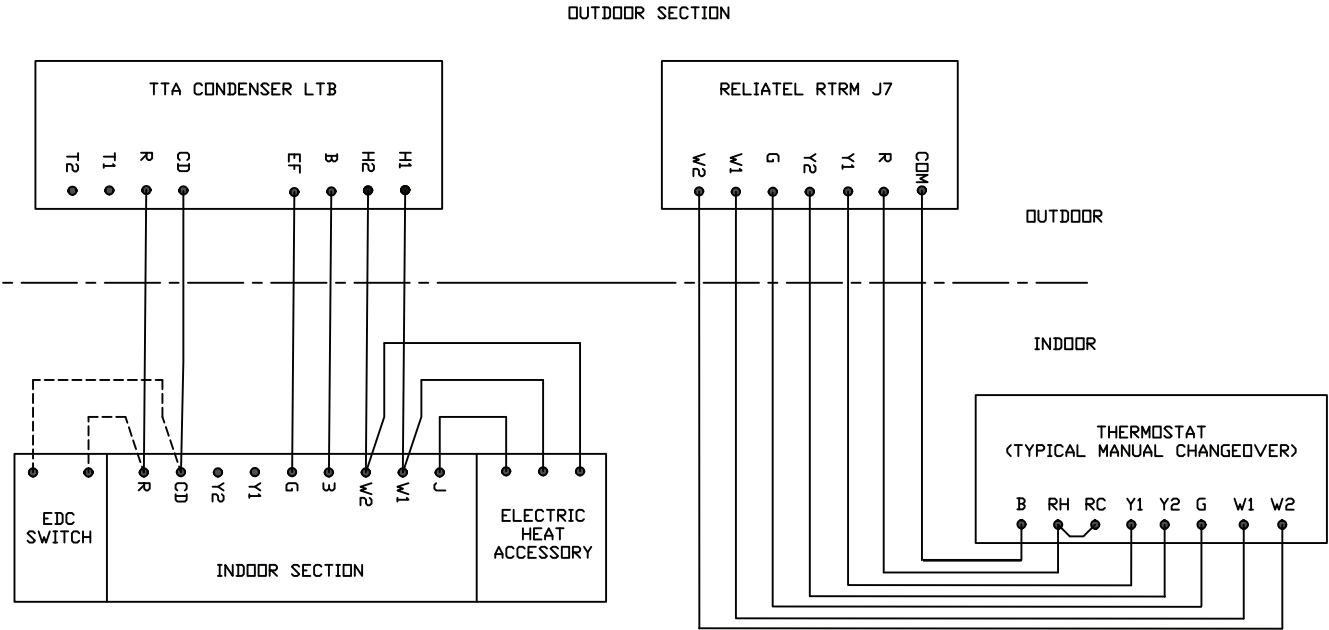


Figure 24. Thermostat wiring for electromechanical units

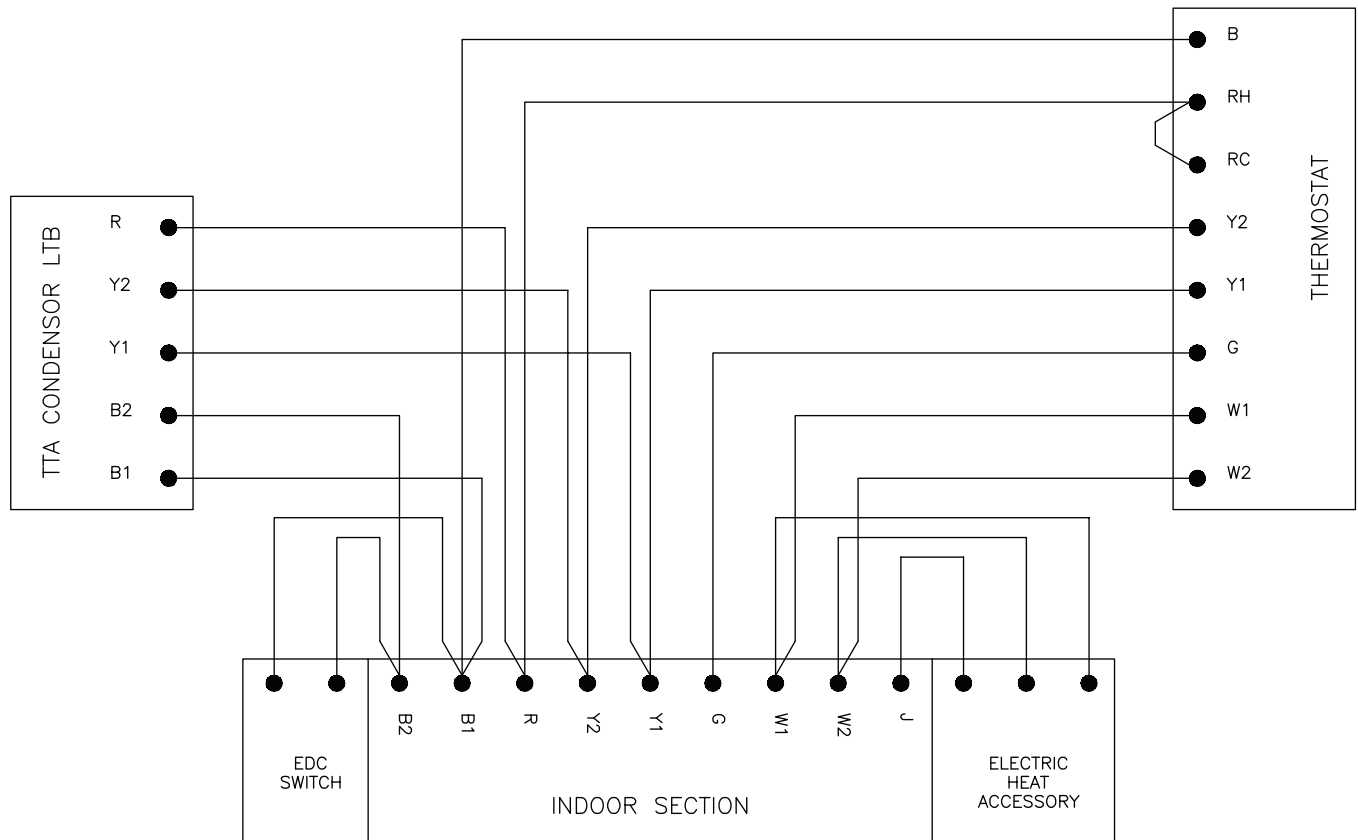

Refrigerant Circuit

Figure 25. Typical split system cooling refrigerant circuit — microchannel

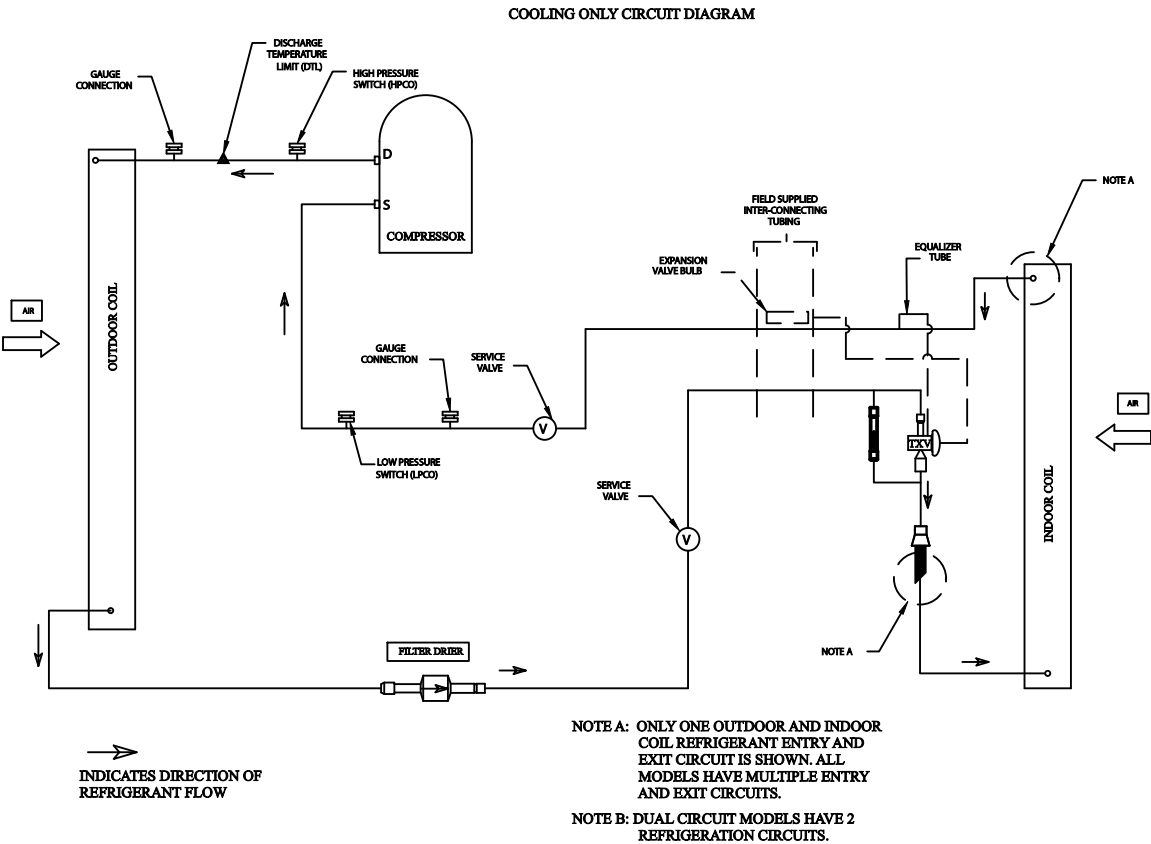

# Electrical Data

**Table 5. Electrical characteristics — compressor and condenser fan motors — 60 Hz**

Tons	Unit Model Number	Compressor Motor					Condenser Fan Motor				
		No.	Volts	Phase	Amps		No.	Volts	Phase	Amps	
					RLA	LRA				FLA	LRA
					(Ea.)	(Ea.)				(Ea.)	(Ea.)
6	TTA073G3	1	208-230	3	21.9	136	1	208-230	1	3.1	8.1
	TTA073G4	1	460	3	9.1	66.1	1	460	1	1.6	3.8
	TTA073GK	1	380	3	10.3	83	1	380	1	1.9	4.9
	TTA073GW	1	575	3	7.4	55.3	1	575	1	1.2	3
6	TTA073H3	2	208-230	3	9	71	1	208-230	1	3.1	8.1
	TTA073H4	2	460	3	5.7	38	1	460	1	1.6	3.8
	TTA073HK	2	380	3	5.5	45	1	380	1	1.9	4.9
	TTA073HW	2	575	3	3.8	36.5	1	575	1	1.2	3
7.5	TTA090G3	1	208-230	3	25	164	1	208-230	1	3.1	8.1
	TTA090G4	1	460	3	12.9	100	1	460	1	1.6	3.8
	TTA090GK	1	380	3	13.9	94.3	1	380	1	1.9	4.9
	TTA090GW	1	575	3	10.6	78	1	575	1	1.2	3
7.5	TTA090H3	2	208-230	3	14.6	83.1	1	208-230	1	3.1	8.1
	TTA090H4	2	460	3	6.8	41	1	460	1	1.6	3.8
	TTA090HK	2	380	3	7.6	51.8	1	380	1	1.9	4.9
	TTA090HW	2	575	3	4.9	33	1	575	1	1.2	3
10	TTA120G3	1	208-230	3	33	267	1	208-230	1	5	14.4
	TTA120G4	1	460	3	17	142	1	460	1	2.5	5.8
	TTA120GK	1	380	3	25	160	1	380	1	3.4	7.8
	TTA120GW	1	575	3	16	80	1	575	1	2	5.1
10	TTA120H3	2	208-230	3	17.8	110	1	208-230	1	5	14.4
	TTA120H4	2	460	3	8.6	52	1	460	1	2.5	5.8
	TTA120HK	2	380	3	8.6	51.5	1	380	1	3.4	7.8
	TTA120HW	2	575	3	6.4	38.9	1	575	1	2	5.1
10	TTA120J3	2	208-230	3	16	110	1	208-230	1	5	14.4
	TTA120J4	2	460	3	7.8	52	1	460	1	2.5	5.8
	TTA120JW	2	575	3	5.7	39	1	575	1	2	5.1
12.5	TTA150H3	2	208-230	3	22.4	149	1	208-230	1	5	14.4
	TTA150H4	2	460	3	10.6	75	1	460	1	2.5	5.8
	TTA150HK	2	380	3	11.3	88	1	380	1	3.4	7.8
	TTA150HW	2	575	3	7.7	54	1	575	1	2	5.1
15	TTA180H3	2	208-230	3	25	164	2	208-230	1	5	14.4
	TTA180H4	2	460	3	12.2	100	2	460	1	2.5	5.8
	TTA180HK	2	380	3	13.9	94	2	380	1	3.4	7.8
	TTA180HW	2	575	3	9.2	78	2	575	1	2	5.1
15	TTA180J3	2	208-230	3	25.8	164	2	208-230	1	3.1	8.1
	TTA180J4	2	460	3	12.5	100	2	460	1	1.6	3.8
	TTA180JK	2	380	3	14.3	94	2	380	1	1.9	4.9
	TTA180JW	2	575	3	10.3	78	2	575	1	1.2	3
20	TTA240H3	2	208-230	3	39.1	267	2	208-230	1	5	14.4
	TTA240H4	2	460	3	18.6	142	2	460	1	2.5	5.8
	TTA240HK	2	380	3	22.4	160	2	380	1	3.4	7.8
	TTA240HW	2	575	3	15.4	103	2	575	1	2	5.1

**Table 5. Electrical characteristics — compressor and condenser fan motors — 60 Hz (continued)**

Tons	Unit Model Number	Compressor Motor					Condenser Fan Motor				
		No.	Volts	Phase	Amps		No.	Volts	Phase	Amps	
					RLA	LRA				FLA	LRA
					(Ea.)	(Ea.)				(Ea.)	(Ea.)
20	TTA240J3	2	208-230	3	39.1	267	2	208-230	1	5	14.4
	TTA240J4	2	460	3	19.8	142	2	460	1	2.5	5.8
	TTA240JK	2	380	3	22.4	160	2	380	1	3.4	7.8
	TTA240JW	2	575	3	15.8	103	2	575	1	2	5.1
25	TTA300J3	2	208-230	3	41	304	2	208-230	1	5	14.4
	TTA300J4	2	460	3	19.4	147	2	460	1	2.5	5.8
	TTA300JK	2	380	3	23.8	168	2	380	1	3.4	7.8
	TTA300JW	2	575	3	16.7	122	2	575	1	2	5.1

**Note:** Electrical characteristics reflect nameplate values and are calculated in accordance with cULus and ARI specifications.

**Table 6. Unit wiring — condensing units — 60 Hz**

Tons	Unit Model Number	Unit Operating Voltage Range	Minimum Circuit Ampacity	Maximum Fuse or HACR Circuit Breaker Size
6	TTA073G3	187-253	30.5	50
	TTA073G4	414-506	13	20
	TTA073GK	342-418	15	20
	TTA073GW	518-632	10.5	15
6	TTA073H3	187-253	24	30
	TTA073H4	414-506	15	20
	TTA073HK	342-418	15	15
	TTA073HW	518-632	10	15
7.5	TTA090G3	187-253	34.4	45
	TTA090G4	414-506	17.7	25
	TTA090GK	342-418	20	30
	TTA090GW	518-632	14.5	20
7.5	TTA090H3	187-253	36	50
	TTA090H4	414-506	16.9	20
	TTA090HK	342-418	20	25
	TTA090HW	518-632	12.2	15
10	TTA120G3	187-253	46.3	70
	TTA120G4	414-506	23.5	40
	TTA120GK	342-418	34.7	50
	TTA120GW	518-632	22	35
10	TTA120H3	187-253	45.1	50
	TTA120H4	414-506	21.9	25
	TTA120HK	342-418	22.8	30
	TTA120HW	518-632	16.4	20
10	TTA120J3	187-253	41	50
	TTA120J4	414-506	20	25
	TTA120JW	518-632	15	20
12.5	TTA150H3	187-253	56	70
	TTA150H4	414-506	27	35
	TTA150HK	342-418	29	40
	TTA150HW	518-632	20	25

**Table 6. Unit wiring — condensing units — 60 Hz (continued)**

Tons	Unit Model Number	Unit Operating Voltage Range	Minimum Circuit Ampacity	Maximum Fuse or HACR Circuit Breaker Size
15	TTA180H3	187-253	67	90
	TTA180H4	414-506	33	40
	TTA180HK	342-418	39	50
	TTA180HW	518-632	25	30
15	TTA180J3	187-253	65	80
	TTA180J4	414-506	32	40
	TTA180JK	342-418	37	50
	TTA180JW	518-632	26	35
20	TTA240H3	187-253	98	125
	TTA240H4	414-506	47	60
	TTA240HK	342-418	58	70
	TTA240HW	518-632	39	50
20	TTA240J3	187-253	98	125
	TTA240J4	414-506	47	60
	TTA240JK	342-418	58	70
	TTA240JW	518-632	39	50
25	TTA300J3	187-253	103	125
	TTA300J4	414-506	49	60
	TTA300JK	342-418	61	80
	TTA300JW	518-632	42	50

**Notes:**

1. Electrical characteristics reflect nameplate values and are calculated in accordance with cULus and ARI specifications. 7.5 and 10 ton values are system rated; 12.5 - 25 ton values are condensing unit only rated.
2. HACR type circuit breaker per NEC.

**Table 7. Electrical characteristics — compressor and condenser fan motors — 50 Hz**

Tons	Unit Model Number	Compressor Motor					Condenser Fan Motor				
		No.	Volts	Phase	Amps		No.	Volts	Phase	Amps	
					RLA (Ea.)	LRA (Ea.)				RLA (Ea.)	LRA (Ea.)
5	TTA061GD	1	380-415-50	3	8.9	67.1	1	380-415-50	1	1.6	3.8
	TTA061HD	2	380-415-50	3	5.4	38	1	380-415-50	1	1.6	3.8
6.25	TTA076GD	1	380-415-50	3	12.5	101	1	380-415-50	1	1.6	3.8
	TTA076HD	2	380-415-50	3	6.7	43	1	380-415-50	1	1.6	3.8
8.33	TTA101GD	1	380-415-50	3	19	142	1	380-415-50	1	1.9	5.8
	TTA101HD	2	380-415-50	3	8	51.5	1	380-415-50	1	1.9	5.8
	TTA101JD	2	380-415-50	3	7.8	52	1	380-415-50	1	1.9	5.8
10.4	TTA126HD	2	380-415-50	3	10.6	74	1	380-415-50	1	1.9	5.8
13	TTA156HD	2	380-415-50	3	12.2	101	2	380-415-50	1	1.9	5.8
	TTA156JD	2	380-415-50	3	12.5	101	2	380-415-50	1	1.6	3.8
16.7	TTA201HD	2	380-415-50	3	18.6	142	2	380-415-50	1	1.9	5.8
	TTA201JD	2	380-415-50	3	18.6	142	2	380-415-50	1	1.9	5.8
20.9	TTA251JD	2	380-415-50	3	19.2	147	2	380-415-50	1	1.9	5.8

**Note:** Electrical characteristics reflect nameplate values and are calculated in accordance with UL and ARI specifications.

**Table 8. Unit wiring — condensing units — 50 Hz**

<b>Tons</b>	<b>Unit Model Number</b>	<b>Unit Operating Voltage</b>	<b>Maximum Circuit Ampacity</b>	<b>Maximum Fuse Size or Maximum Circuit Breaker</b>
5	TTA061GD	380/415	12.7	20
	TTA061HD	380/415	14	15
6.25	TTA076GD	380/415	17.3	25
	TTA076HD	380/415	16.7	20
8.33	TTA101GD	380/415	25.7	40
	TTA101HD	380/415	19.9	25
	TTA101JD	380/415	20	25
10.4	TTA126HD	380/415	26	35
13	TTA156HD	380/415	32	40
	TTA156JD	380/415	32	40
16.7	TTA201HD	380/415	46	60
	TTA201JD	380/415	46	60
20.9	TTA251JD	380/415	48	60

**Note:** HACR type circuit breaker per NEC

# Charging Charts and Superheat

Figure 26. TTA061G

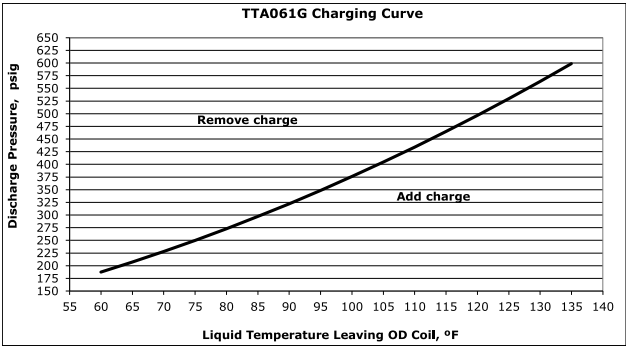


Figure 29. TTA073H

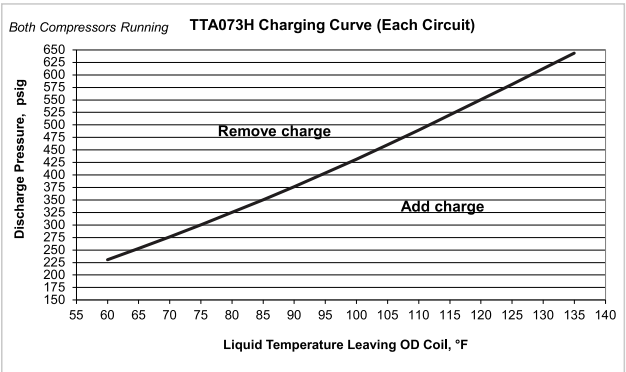


Figure 27. TTA061H

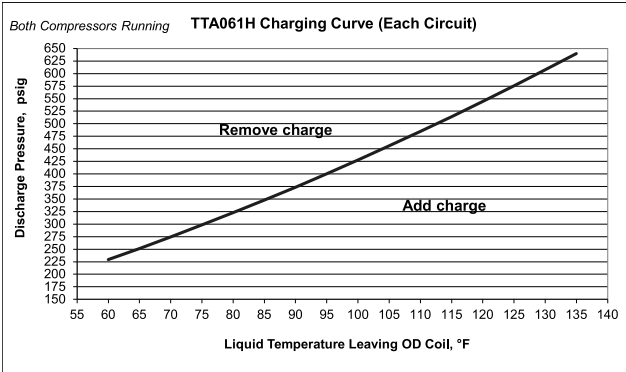


Figure 30. TTA076G

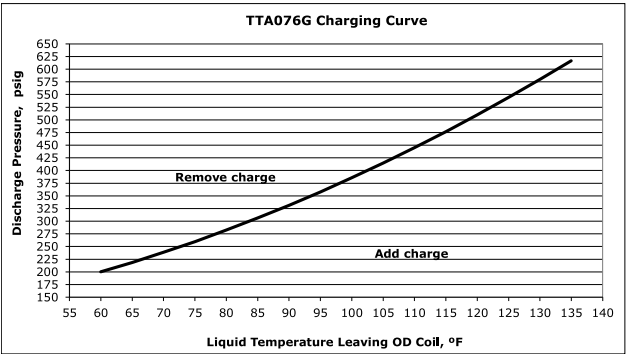


Figure 28. TTA073G

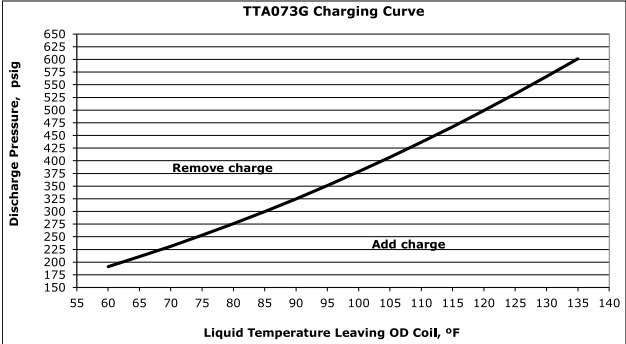


Figure 31. TTA076H

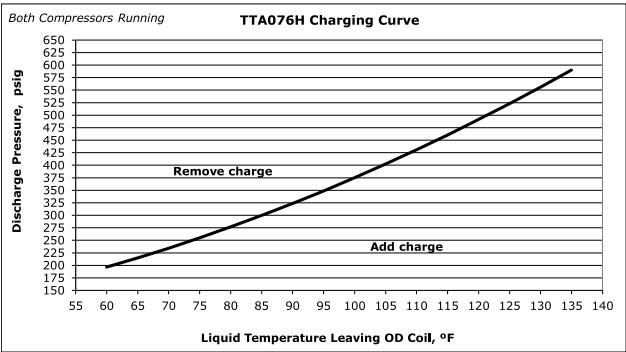


Figure 32. TTA090G

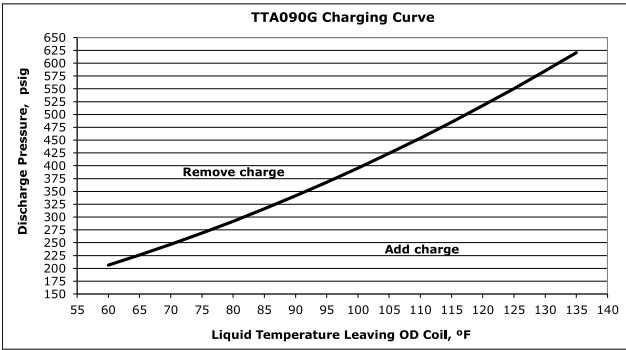


Figure 36. TTA101H

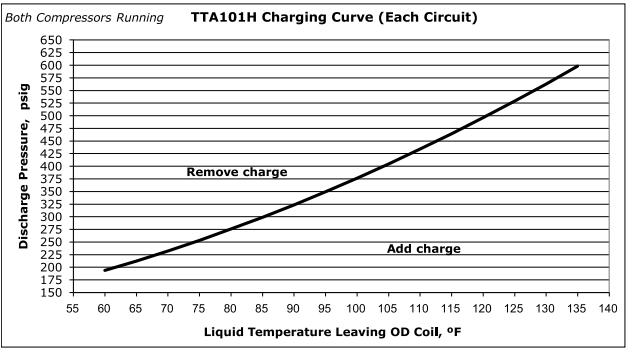


Figure 33. TTA090H

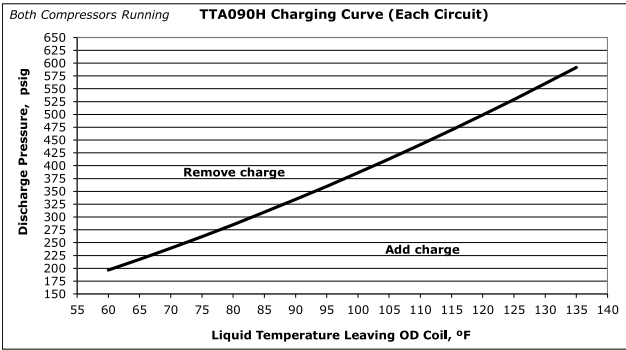


Figure 37. TTA120G

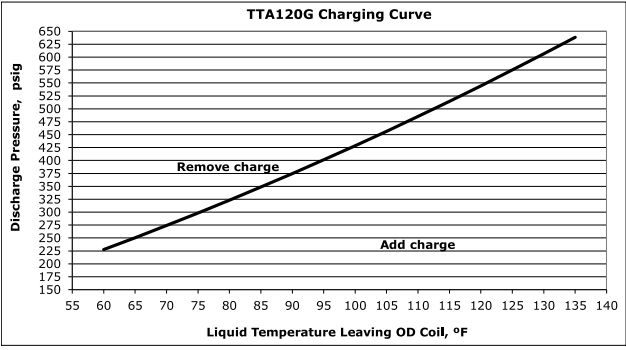


Figure 34. TTA101J

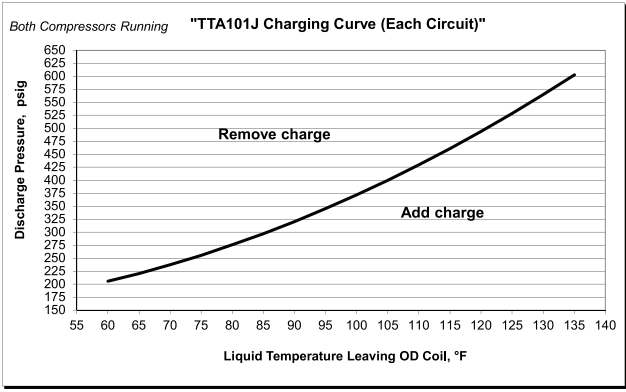


Figure 38. TTA120J

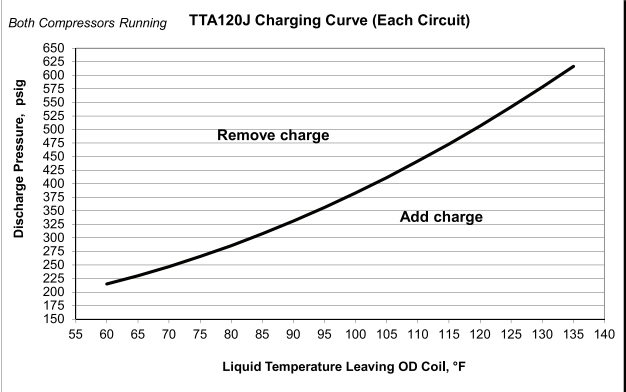


Figure 35. TTA101G



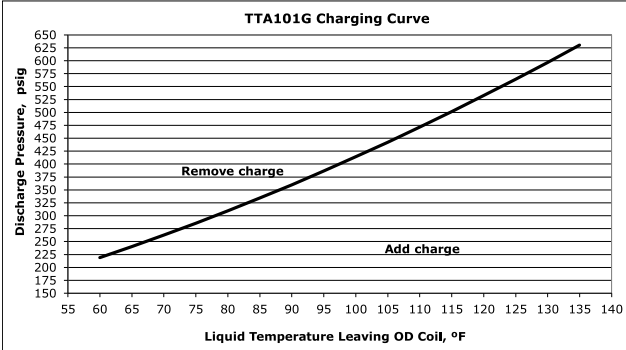



Figure 39. TTA120H

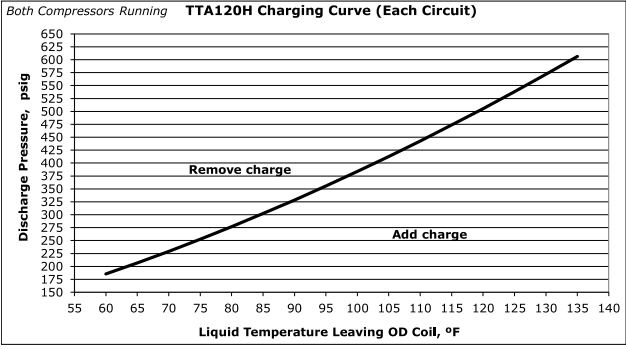


**Figure 40. TTA126H**

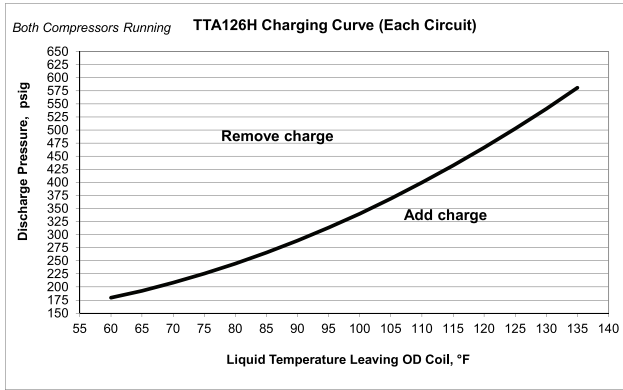


**Figure 43. TTA156J**

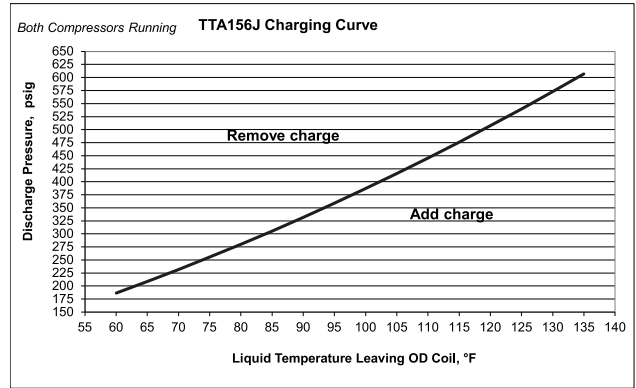


**Figure 41. TTA150H**

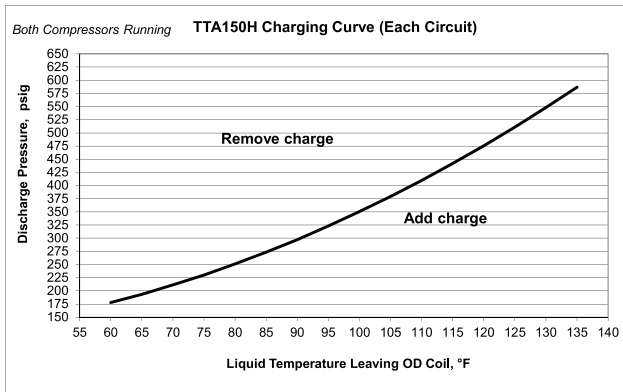


**Figure 44. TTA180H**

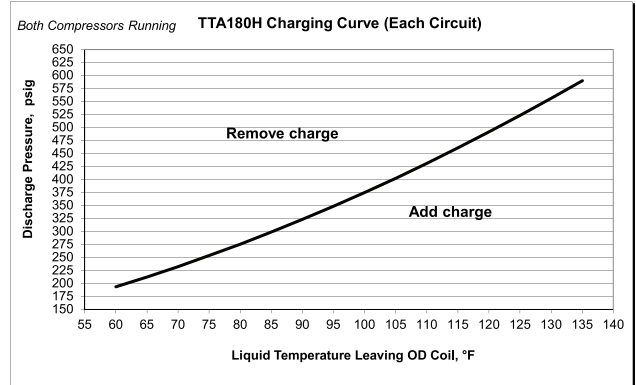

**Figure 42. TTA156H**

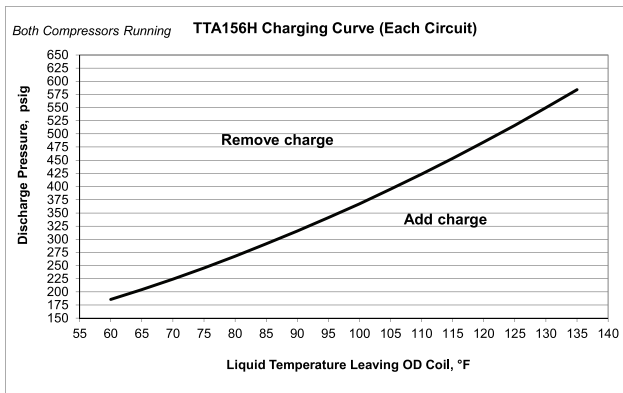

**Figure 45. TTA180J**

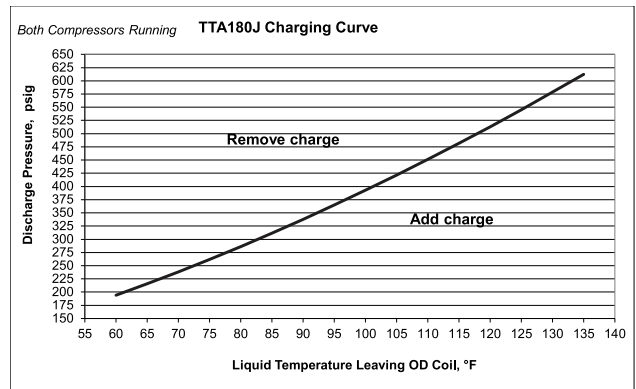

# Charging Charts and Superheat

Figure 46. TTA201H

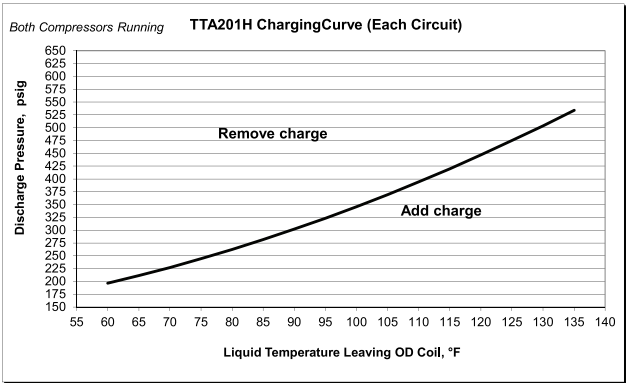


Figure 49. TTA240J

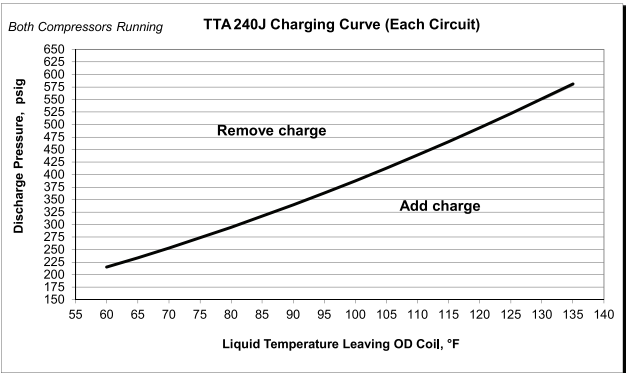


Figure 47. TTA201J

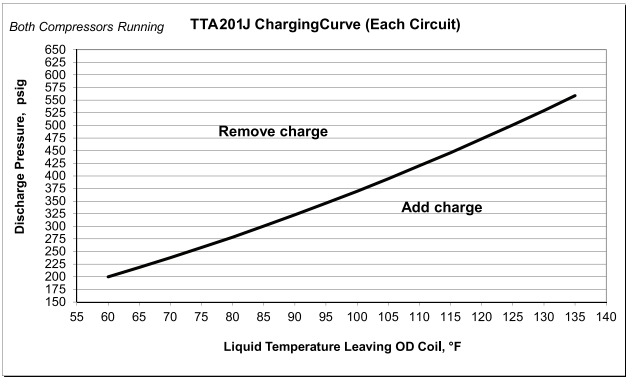


Figure 50. TTA251J

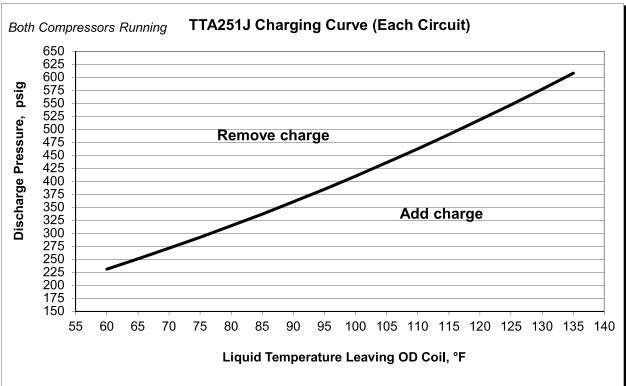


Figure 48. TTA240H

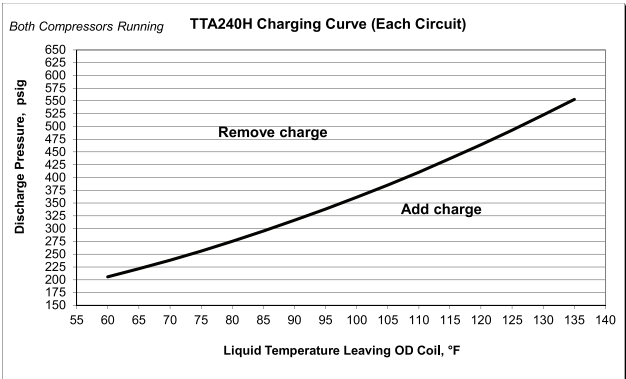


Figure 51. TTA300J

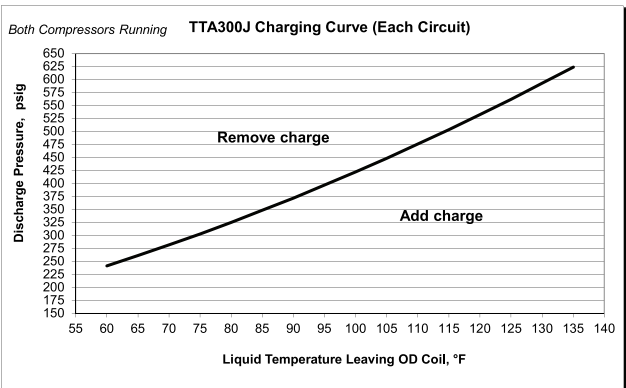


Table 9. TTA superheat with matched TWE air handler

Condenser	Air Handler	Cooling Superheat	
		Circuit 1	Circuit 2
TTA061G	TWE076D	13.2	—
TTA061H	TWE073E	14.7	15.6
TTA073G	TWE090D	13.2	—
TTA073H	TWE073E	14.7	15.6
TTA076G	TWE076D	15.5	—

**Table 9. TTA superheat with matched TWE air handler (continued)**

Condenser	Air Handler	Cooling Superheat	
		Circuit 1	Circuit 2
TTA076H	TWE076E	10.5	10.5
TTA090G	TWE090D	15.5	—
TTA090H	TWE090E	10.5	10.5
TTA101G	TWE101D	13.7	—
TTA101H	TWE101E	15.9	15.9
TTA101J	TWE101D	11.4	—
TTA120G	TWE120D	13.7	—
TTA120H	TWE120E	15.9	15.9
TTA120J	TWE120D	11.4	—
TTA126H	TWE126E	12.7	12.7
TTA150H	TWE150E	12.7	12.7
TTA156H	TWE156E	10.3	10.3
TTA156J	TWE156E	10.0	—
TTA180H	TWE180E	10.3	10.3
TTA180J	TWE180E	10.0	—
TTA201H	TWE201E	10.8	10.8
TTA201J	TWE201E	11.5	—
TTA240H	TWE240E	11.5	11.5
TTA240J	TWE240E	11.5	—
TTA251J	TWE251E	12.9	—
TTA300J	TWE300E	12.9	—

**Notes:**

1. An adjustable TXV is provided for each circuit in the TWE and TWA models. If the application causes the superheat to deviate from the values shown above by more than 1 degree - after the system has achieved steady state - the TXV should be adjusted to provide the values shown as measured at the compressor.
2. The values given above have been tested and are approved for the matched sets shown. If an alternate combination is used, an expansion device should be used that provides 16-20°F degrees of superheat measured at the compressor.
3. Check and adjust superheat using this table, then compare with charging chart to determine if charge corrections are necessary.

# Installation Checklist

Complete this checklist once the unit is installed to verify that all recommended procedures have been accomplished before starting the system. Do not operate the system until all items covered by this checklist are complete.

- ☐ Inspect unit location for proper required service clearances.
- ☐ Inspect unit location for proper free air clearances.
- ☐ Inspect unit location for secure, level mounting position.
- ☐ Remove coil protection boards on microchannel units.

## Refrigerant Piping

- ☐ Properly sized/constructed liquid and suction lines connected to stubs at both the indoor and outdoor units?

- ☐ Insulated the entire suction line?
- ☐ Insulated portions of liquid line exposed to extremes in temperature?
- ☐ Performed initial leak test?
- ☐ Evacuated each refrigerant circuit to 500 microns?
- ☐ Charged each circuit with proper amount of R-410A?

## Electrical Wiring

- ☐ Provided unit power wiring (with disconnect) to proper terminals in the unit control section?
- ☐ Installed system indoor thermostat?
- ☐ Installed system low voltage interconnecting wiring to proper terminals of outdoor unit, indoor unit and system thermostat?

# Pre-Start

## Control Circuit Features

**Note:** *Not all of these features may be required for your unit, check electrical schematic.*

### Discharge Temperature Limit (DTL)

The control's sensor is located on the discharge line. This device will shut off the compressor and the outdoor fan(s) if the discharge temperature exceeds the DTL setting. Once the discharge temperature has returned to normal, the compressor will cycle back on.

### Low Outdoor Ambient Cooling

The Evaporator Defrost Control is standard equipment on Air Handlers and will permit low ambient cooling down to 50°F. For cooling operation down to 0°F, use an Accessory Head Pressure Control on the outdoor unit.

### Evaporator Defrost Control (EDC)

This control is located in the Air Handler. The control's sensing tube is embedded vertically in the evaporator coil, near the center. This device will stop the compressor if the indoor coil temperature drops below its setting. The indoor air will still circulate across the coil bringing the temperature of the coil back up to the cut-in temperature of the evaporator defrost control.

### Low Pressure Cut-Out (LPCO)

This control's sensor is located in the suction (gas) line, near the compressor. This control will stop the compressor and the outdoor fans if suction pressure

drops below the Low Pressure Cut-Out setting. Once the suction pressure has returned to normal, the compressor and outdoor fans will cycle back on.

### High Pressure Cut-Out (HPCO)

This control's sensor is located in the discharge line. This device will shut off the compressor and the outdoor fan(s) if the discharge pressure exceeds the High Pressure Cut-Out's setting. Once the discharge pressure has returned to normal, the compressor will cycle back on.

## ⚠ WARNING

### Prevent Injury!

**Due to agency safety requirements, no schrader core is to be installed beneath the HPCO. Removal of the HPCO without evacuating the system charge could cause injury and release of refrigerant.**

### Internal Overload Protector (IOL)

This device is embedded in the compressor. It will shut off the compressor if the discharge temperature of the compressor exceeds its design trip temperature.

**Note:** *The IOL will put the compressor back in operation once the compressor motor heat has dropped below the trip setting; however, a check of the refrigerant and electrical systems should be made to determine the cause and be corrected.*

# Start-Up

## Electromechanical Controls

The 24-volt, electromechanical controls feature a control transformer and contactor pressure lugs for power wiring. Once the unit is properly installed and pre-start procedures are complete, start the unit by turning the System Switch on the indoor thermostat to either **HEAT**, **COOL** or **AUTO**. The system should operate normally.

### NOTICE

#### Equipment Damage!

Ensure the disconnect for the indoor air handler is closed before operating the system. Operating the outdoor unit without the indoor fan energized can cause unit trip-out on high pressure control and/or liquid flood back to the compressor.

### General

Operation of the system cooling (and optional heating) cycles is controlled by the position of the system switch on the room thermostat. Once the system switch is placed in either the **HEAT** or **COOL** position, unit operation is automatic. The optional automatic changeover thermostat, when in the **AUTO** position, automatically changes to heat or cool with sufficient room temperature change.

### Evaporator Fan (Indoor Supply Air)

The evaporator fan is controlled by an **ON/AUTO** switch on the room thermostat. With the switch positioned at **AUTO** and the system operating in the cooling mode, fan operation coincides with the cooling run cycles. If the system is equipped with heat and is operating in the heating mode while the fan switch is at **AUTO**, fan operation coincides with the heating run cycles. When the fan switch is positioned at **ON**, fan operation is continuous.

### Cooling Mode

With the disconnect switch in the **ON** position, current is supplied to the compressor sump heater(s), phase monitor and control transformer. The sump heater(s) supplies heat to the compressor(s) during the “Off” cycle. The phase monitor looks at the incoming power to verify that there is no reversed phase, no phase imbalance, and no loss of phase. If the phase monitor detects any of these three conditions, it will shut off control voltage. The transformer steps down the line voltage to 24V for the low voltage control circuit. When the room thermostat system switch is positioned at **COOL** and the fan switch is at **AUTO**, the compressor contactor energizes on a call for cooling. When the contacts of the compressor contactor close, operation of the compressor and condenser fan begins. The

evaporator fan contactor also energizes on a call for cooling and initiates evaporator fan operation.

On units with dual circuits, the second stage of cooling is initiated as a result of the 2-stage thermostat calling for additional cooling.

## ReliaTel Controls

The ReliaTel™ Control is a microelectronic control feature, which provides operating functions that are significantly different than conventional Electromechanical units. The ReliaTel™ Refrigeration Module (RTRM) uses Proportional/Integral control algorithms to perform specific unit functions that govern the unit operation in response to application conditions.

The RTRM provides compressor anti-short cycle timing functions through minimum “Off” and “On” timing to increase reliability, performance and to maximize unit efficiency. Upon power initialization, the RTRM performs self-diagnostic checks to ensure that all internal controls are functioning. It checks the configuration parameters against the components connected to the system. The system LED located on the RTRM module is turned “On” within one second after power-up if all internal operations are okay.

Once the unit is properly installed and pre-start procedures are complete, start the unit by turning the System Switch on the indoor thermostat to either **HEAT**, **COOL** or **AUTO**. The system should operate normally.

### NOTICE

#### Equipment Damage!

Ensure the disconnect for the indoor air handler is closed before operating the system. Operating the outdoor unit without the indoor fan energized can cause unit trip-out on high pressure control and/or liquid flood back to the compressor.

### Control Cooling Mode

#### For Zone Sensor Control

When the system switch is set to the **COOL** position and the zone temperature rises above the cooling setpoint, the RTRM energizes the compressor contactor, provided the high and low pressure and the discharge temperature limit controls are closed. When the compressor contacts close, the compressor and the outdoor fan motor start to maintain the zone temperature to within  $\pm 2^{\circ}\text{F}$  of the sensor setpoint at the sensed location. On units with dual circuits, the second stage of cooling is initiated as a result of the Proportional/Integral control algorithms calling for additional cooling.

## For Thermostat Control

When the room thermostat system switch is positioned at **COOL** and the fan switch is at **AUTO**, the RTRM energizes the compressor contactor, provided the high and low pressure and the discharge temperature limit controls are closed. When the contacts of the compressor contactor close, operation of the compressor and condenser fan begins. The evaporator fan contactor also energizes on a call for cooling and initiates evaporator fan operation. On units with dual circuits, the second stage of cooling is initiated as a result of the 2-stage thermostat calling for additional cooling.

**Note:** *Irregular unit operation may occur when the unit is controlled with a triac-switching thermostat. Please review the approved thermostat vendor list for all recommended relay-switching thermostats.*

## Control Evaporator Fan Operation

When the fan selection switch is set to the **AUTO** position, the RTRM energizes the evaporator fan relay coil approximately 1 second after energizing the compressor contactor coil in the cooling mode. In the heating mode, the RTRM energizes the evaporator fan relay coil approximately 1 second before energizing the electric heat contactors.

The RTRM de-energizes the evaporator fan relay coil approximately 60 seconds on dual compressor units and 80 seconds on single compressor units after the

cooling requirement has been satisfied to enhance unit efficiency. When the heating cycle is terminated, the evaporator fan relay coil is de-energized at the same time as the heater contactors. When the fan selection switch is set to the **ON** position, the RTRM keeps the evaporator fan relay coil energized for continuous fan motor operation.

## Control Heating Operation

Electric heat is factory disabled on all split system units with ReliaTel control (jumper placed between J2-1 and J2-2 RTRM inputs). To configure the unit for electric heat, cut or remove the jumper wire between J2-1 and J2-2 on the RTRM. All split system units with ReliaTel control are also configured from the factory for only 1-stage of electric heat (jumper placed between J1-3 and J1-6 RTRM inputs). To configure the unit for 2-stages of electric heat, cut or remove the jumper placed between J1-3 and J1-6 RTRM inputs.

When the system switch is set to the **HEAT** position and heating is required, the RTRM energizes the Heat 1 relay coil on the RTRM. When the Heat 1 relay contacts close, the first stage electric heat contactor is energized. If the first stage of electric heat cannot satisfy the heating requirement, the RTRM energizes the Heat 2 relay coil on the RTRM. When the Heat 2 relay contacts close, the second stage electric heat contactor is energized. The first and second stages of heat are cycled **"On"** and **"Off"** as required to maintain the zone.

# Service Test Modes for ReliaTel™ Controls

## Test Modes

Upon power initialization, the RTRM performs self-diagnostic checks to ensure that all internal controls are functional. It also checks the configuration parameters against the components connected to the system. The system LED located on the RTRM module is turned **"On"** within one second of power-up if internal operation is okay.

Use one of the following **"Test"** procedures to bypass some time delays and to start the unit at the control panel. Each step of unit operation can be activated individually by temporarily shorting across the **"Test"** terminals for 2 to 3 seconds. The system LED located on the RTRM module will blink when the test mode has been initiated. The unit can be left in any **"Test"** step for up to one hour before it will automatically terminate, or it can be terminated by opening the main power disconnect switch. Once the test mode has been terminated, the system LED will glow continuously and the unit will revert to the **"System"** control.

There are three methods in which the **"Service Test"** can be cycled at LTB-Test 1(T1) and LTB-Test 2 (T2).

## Step Test Mode

This method initiates the different components of the unit, one at a time, by temporarily shorting across the two test terminals for 2 to 3 seconds.

For the initial start-up of the unit, this method allows the technician to cycle a component **"On"** and have up to one hour to complete the check. Service Test Mode will be ignored if a short is present across Test 1 and Test 2 at start-up.

## Resistance Test Mode

This method can be used for start-up when a decade box for variable resistance outputs is available. This method initiates the different components of the unit, one at a time, when a specific resistance value is placed across the two test terminals. The unit will remain in the specific test mode for approximately one hour even though the resistance is left on the test terminals.

**Table 10. Service test guide for component operation**

TEST STEP	MODE	FAN	COMP 1	COMP 2	HEAT 1	HEAT 2	OHMS
1	Fan	On	Off	Off	Off	Off	2.2K
2	Cool 1	On	On <sup>(a)</sup>	Off	Off	Off	4.7K
3 <sup>(b)</sup>	Cool 2	On	On <sup>(a)</sup>	On <sup>(a)</sup>	Off	Off	6.8K
4 <sup>(b)</sup>	Heat 1	On	Off	Off	On	Off	10K
5 <sup>(b)</sup>	Heat 2	On	Off	Off	On	On	15K

<sup>(a)</sup> The condenser fans will operate any time a compressor is ON.

<sup>(b)</sup> Steps for optional accessories and non-applicable modes in unit will be skipped.

## Auto Test Mode

This method is not recommended for start-up due to the short timing between individual component steps. This method initiates the different components of the unit, one at a time, when a fixed jumper is installed across the test terminals.

The unit will start the first test step and change to the next step every 30 seconds. At the end of the test mode, control of the unit will automatically revert to the applied **"System"** control method. For unit test steps, test modes, and step resistance values to cycle the various components, refer to [Table 10, p. 46](#).

# Troubleshooting

## Troubleshooting ReliaTel™ Controls

### ⚠ WARNING

#### Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

The RTRM has the ability to provide the service personnel with some unit diagnostics and system status information.

Before turning the main power disconnect switch “Off,” follow the steps below to check the ReliaTel™ Refrigeration Module (RTRM). All diagnostics & system status information stored in the RTRM will be lost when the main power is turned “Off”.

To prevent injury or death from electrocution, it is the responsibility of the technician to recognize this hazard and use extreme care when performing service procedures with the electrical power energized.

**Note:** The J6 & J7 screw terminals must be tightened in order to accurately measure voltage in the required steps.

1. Verify that the system LED on the RTRM is burning continuously. If the LED is lit, go to Step 3.
2. If the LED is not lit, verify that 24 VAC is present between J1-1 and J1-2. If 24 VAC is present, proceed to Step 3. If 24 VAC is not present, check the unit main power supply, check transformer (TNS1). Proceed to Step 3 if necessary.
3. Utilizing “Method 1,” p. 47 or “Method 2,” p. 48 in the System Status Checkout Procedure section, check the following:
  - System status
  - Heating status
  - Cooling status

**Note:** If a System failure is indicated, proceed to Step 4. If no failures are indicated, proceed to Step 5.

4. If a System failure is indicated, recheck Step 1 and Step 2. If the LED is not lit in Step 1, and 24 VAC is present in Step 2, then the RTRM has failed. Replace the RTRM.
5. If no failures are indicated, use one of the TEST mode procedures described in the “Service Test Modes chapter,” p. 46 to start the unit. This procedure will allow you to check all of the RTRM

outputs, and all of the external controls (relays, contactors, etc.) that the RTRM outputs energize, for each respective mode. Proceed to Step 6.

6. Step the system through all of the available modes, and verify operation of all outputs, controls, and modes. If a problem in operation is noted in any mode, you may leave the system in that mode for up to one hour while troubleshooting. Refer to the sequence of operations for each mode, to assist in verifying proper operation. Make the necessary repairs and proceed to Step 7 and Step 8.
7. If no abnormal operating conditions appear in the test mode, exit the test mode by turning the power “Off” at the main power disconnect switch.
8. Refer to the individual component test procedures if other microelectronic components are suspect.

## System Status Checkout Procedure

“System Status” is checked by using one of the following two methods:

### Method 1

If the Zone Sensor Module (ZSM) is equipped with a remote panel with LED status indication, you can check the unit within the space. If the ZSM does not have LED's, use “Method 2,” p. 48. BAYSENS010B, BAYSENS011B, BAYSENS119A, BAYSENS020A, BAYSENS021A, BAYSENS023A, BAYSENS109 and BAYSENS110 all have the remote panel indication feature. The LED descriptions are listed below.

- **LED 1 (System)**
  - “On” during normal operation.
  - “Off” if a system failure occurs or the LED fails.
  - “Flashing” indicates test mode
- **LED 2 (Heat)**
  - “On” when the heat cycle is operating.
  - “Off” when the heat cycle terminates or the LED fails.
  - “Flashing” indicates a heating failure.
- **LED 3 (Cool)**
  - “On” when the cooling cycle is operating.
  - “Off” when the cooling cycle terminates or the LED fails.
  - “Flashing” indicates a cooling failure.

The following information describes the complete listing of failure indication causes.

### System Failure

Check the voltage between terminals 6 and 9 on J6, it should read approximately 32 VDC. If no voltage is present, a System failure has occurred. Refer to [Step 4](#) in the previous section for the recommended troubleshooting procedure.

### Cooling Failure

1. Cooling and heating set point (slide pot) on the zone sensor has failed. Refer to the ["Programmable & Digital Zone Sensor Test,"](#) p. 49.
2. Zone temperature thermistor ZTEMP on ZTS failed. Refer to the ["Programmable & Digital Zone Sensor Test,"](#) p. 49.
3. CC1 or CC2 24 VAC control circuit has opened, check CC1 & CC2 coils, and any of the controls below that apply to the unit (HPC1, HPC2, DTL1, DTL2).
4. LPC1 has opened during the 3 minute minimum "on time" during 4 consecutive compressor starts, check LPC1 or LPC2 by testing voltage between the J1-8 & J3-2 terminals on the RTRM and ground. If 24 VAC is present, the LPCs have not tripped. If no voltage is present, LPCs have tripped.

### Simultaneous Heat and Cool Failure

#### ⚠ WARNING

#### Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

- Emergency Stop is activated.

### Method 2

The second method for determining system status is done by checking voltage readings at the RTRM (J6). The system indication descriptions and the approximate voltages are listed below.

### System Failure

Measure the voltage between terminals J6-9 & J6-6.

- **Normal Operation** = approximately 32 VDC
- **System Failure** = less than 1 VDC, approximately 0.75 VDC
- **Test Mode** = voltage alternates between 32 VDC & 0.75 VDC

### Heat Failure

Measure the voltage between terminals J6-7 & J6-6.

- **Heat Operating** = approximately 32 VDC
- **Heat Off** = less than 1 VDC, approximately 0.75 VDC
- **Heating Failure** = voltage alternates between 32 VDC & 0.75 VDC

### Cool Failure

Measure the voltage between terminals J6-8 & J6-6.

- **Cool Operating** = approximately 32 VDC
- **Cool Off** = less than 1 VDC, approximately 0.75 VDC
- **Cooling Failure** = voltage alternates between 32 VDC & 0.75 VDC

To use LED's for quick status information at the unit, purchase a BAYSENS010B ZSM and connect wires with alligator clamps to terminals 6 through 10. Connected each respective terminal wire (6 through 10) from the Zone Sensor to the unit J6 terminals 6 through 10.

**Note:** If the system is equipped with a programmable zone sensor, (BAYSENS119A, or BAYSENS023A), the LED indicators will not function while the BAYSENS010A is connected.

## Temperature Tests

**Note:** These procedures are not for programmable or digital models and are conducted with the Zone Sensor Module electrically removed from the system.

### Test 1 - Zone Temperature Thermistor (ZTEMP)

This component can be tested by measuring the resistance between terminals 1 and 2 on the Zone Temperature Sensor. See [Table 11, p. 48](#) for typical indoor temperatures, and corresponding resistive values.

**Table 11. Typical indoor temperatures and values**

Zone Temperature	Nominal Resistance
50°F or 10.0°C	19.9 Kohms
55°F or 12.8°C	17.47 Kohms
60°F or 15.6°C	15.3 Kohms
65°F or 18.3°C	13.49 Kohms
70°F or 21.1°C	11.9 Kohms
75°F or 23.9°C	10.50 Kohms
80°F or 26.7°C	9.3 Kohms
85°F or 29.4°C	8.25 Kohms
90°F or 32.2°C	7.3 Kohms

### Test 2 - Cooling Set Point (CSP) and Heating Set Point (HSP)

Cool SP = Terminals 2 and 3

Range = 100 to 900 Ohms approximate

Heat SP = Terminals 2 and 5

Range = 100 to 900 Ohms approximate

### Test 3 - System Mode and Fan Selection

The combined resistance of the **MODE** selection switch and the **FAN** selection switch can be measured between terminals 2 and 4 on the Zone Sensor. The possible switch combinations are listed in [Table 12, p. 49](#) with their corresponding resistance values.

**Table 12. Test 3 - system mode and fan selection**

Resistance Valves(Ohms)	Zone Sensor Unit/Fan Mode	Local Unit Mode	Local Fan Mode
2.32K	Off/Auto	Off	Auto
4.87K	Cool/Auto	Cool	Auto
7.68K	Auto/Auto	Auto	Auto
10.77K	Off/On	Off	On
13.32K	Cool/On	Cool	On
16.13K	Auto/On	Auto	On
19.48K	Heat/Auto	Heat	Auto
27.93K	Heat/On	Heat	On
35.0K	Emergency Heat/Auto	Emergency Heat	Auto
43.45K	Emergency Heat/On	Emergency Heat	On
Out of Range (Short)	INVALID/Short	Invalid (CV), Auto (VAV)	Invalid
Out of Range (Open)	INVALID/Open	Invalid (CV), Off (VAV)	Invalid

### Test 4 - LED Indicator Test (SYS ON, HEAT, & COOL)

#### ⚠ WARNING

#### Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

#### Method 1

Testing the LED using a meter with diode test function. Test both forward and reverse bias. Forward bias should measure a voltage drop of 1.5 to 2.5 volts, depending on your meter. Reverse bias will show an Over Load, or open circuit indication if LED is functional.

#### Method 2

Testing the LED with an analog Ohmmeter. Connect Ohmmeter across LED in one direction, then reverse the leads for the opposite direction. The LED should have at least 100 times more resistance in reverse direction, as compared with the forward direction. If

high resistance in both directions, LED is open. If low in both directions, LED is shorted.

#### Method 3

To test LED's with ZSM connected to unit, test voltages at LED terminals on ZSM. A measurement of 32 VDC, across an unlit LED, means the LED has failed.

**Important:** Measurements should be made from LED common (ZSM terminal 6 to respective LED terminal).

### Programmable & Digital Zone Sensor Test

#### Testing Serial Communication Voltage

1. Verify 24 VAC is present between terminals J6-14 & J6-11.

### ⚠ WARNING

#### Live Electrical Components!

Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

When it is necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks.

2. Disconnect wires from J6-11 and J6-12. Measure the voltage between J6-11 and J6-12, should be about 32 VDC.
3. Reconnect wires to terminals J6-11 and J6-12. Measure voltage again between J6-11 and J6-12, voltage should flash high and low every 0.5 seconds. The voltage on the low end will measure about 19 VDC, while the voltage on the high end will measure from approximately 24 to 38 VDC.
4. Verify all modes of operation, by running the unit through all of the steps in [“Service Test Modes for ReliaTel Controls,”](#) p. 46.
5. After verifying proper unit operation, exit the test mode. Turn the fan on continuously at the ZSM, by pressing the button with the fan symbol. If the fan comes on and runs continuously, the ZSM is good. If you are not able to turn the fan on, the ZSM is defective.

### RLCI Loss of Communications

If the RLCI loses input from the building management system, the RTRM will control in the default mode after approximately 15 minutes. If the RTRM loses the Heating and Cooling setpoint input, the RTRM will control in the default mode instantaneously. The temperature sensing thermistor in the Zone Sensor Module is the only component required for the **“Default Mode”** to operate.

## Resetting Cooling and Heating Lockouts

Cooling Failures and Heating Lockouts are reset in an identical manner. [“Method 1,”](#) p. 50 explains resetting the system from the space; [“Method 2,”](#) p. 50 explains resetting the system at the unit.

**Note:** Before resetting Cooling Failures and Heating Lockouts check the Failure Status Diagnostics by the methods previously explained. Diagnostics will be lost when the power to the unit is disconnected.

### Method 1

To reset the system from the space, turn the **MODE** selection switch at the zone sensor to the **OFF** position. After approximately 30 seconds, turn the **MODE** selection switch to the desired mode, i.e. **HEAT**, **COOL**, or **AUTO**.

### Method 2

To reset the system at the unit, cycle the unit power by turning the disconnect switch **OFF** and then **ON**

Lockouts can be cleared through the building management system. Refer to the building management system instructions for more information.

## Zone Temperature Sensor (ZTS) Service Indicator

The ZSM SERVICE LED is a generic indicator that will signal the closing of a Normally Open switch at any time, providing the Indoor Motor (IDM) is operating. This indicator is usually used to indicate an airside fan failure.

The RTRM will ignore the closing of this Normally Open switch for 2 (±1) minutes. This helps prevent nuisance SERVICE LED indications.

# Maintenance

## ⚠ WARNING

### Hazardous Voltage w/Capacitors!

Failure to disconnect power and discharge capacitors before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects and discharge all motor start/run capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power cannot be inadvertently energized. For variable frequency drives or other energy storing components provided by Trane or others, refer to the appropriate manufacturer's literature for allowable waiting periods for discharge of capacitors. Verify with an appropriate voltmeter that all capacitors have discharged.

*For additional information regarding the safe discharge of capacitors, see PROD-SVB06\*-EN.*

## NOTICE

### Operating Under Vacuum!

Failure to follow these instructions will result in compressor failure.

**Do not operate or apply power to the compressor while under a vacuum.**

Perform all of the indicated maintenance procedures at the intervals scheduled. This will prolong the life of the unit and reduce the possibility of costly equipment failure.

## Monthly

Conduct the following maintenance inspections once per month.

- ☐ Check unit wiring to ensure all connections are tight and that the wiring insulation is intact.
- ☐ Inspect the condenser coils for dirt and debris. If the coils appear dirty, clean them.
- ☐ With the unit operating in the cooling mode, check the suction and discharge pressures and compare them with Pressure Curve values in unit Service Facts. Record these readings on the "Maintenance Log," p. 53.

## Annually (Cooling Season)

The following maintenance procedures must be performed at the beginning of each cooling season to ensure efficient unit operation.

- ☐ Perform all of the monthly maintenance inspections.
- ☐ With the unit operating, check unit superheat and record the reading in the "Maintenance Log," p. 53.

- ☐ Remove any accumulation of dust and/or dirt from the unit casing.
- ☐ Remove corrosion from any surface and repaint. Check the gasket around the control panel door to ensure it fits correctly and is in good condition to prevent water leakage.
- ☐ Inspect the control panel wiring to ensure that all connections are tight and that the insulation is intact.  
**Note:** *Condenser fan motors are permanently lubricated.*
- ☐ Check refrigerant piping and fittings for leaks
- ☐ Inspect the condenser coils for dirt and debris. If the coils appear dirty, clean them.

## Coil Cleaning

Regular coil maintenance, including annual cleaning—enhances the unit's operating efficiency by minimizing:

- compressor head pressure and amperage draw
- water carryover
- fan brake horsepower
- static pressure losses

At least once each year — or more often if the unit is located in a "dirty" environment — clean the coil using the instructions outlined below. Be sure to follow these instructions as closely as possible to avoid damaging the coils.

## Microchannel (MCHE) Coils

### NOTICE

#### Coil Damage!

**Failure to follow instructions below could result in coil damage.**

**DO NOT use any detergents with microchannel condenser coils.**

**Use pressurized water or air ONLY, with pressure no greater than 600psi.**

***For additional information regarding the proper microchannel coil cleaning procedure, refer to RT-SVB83\*-EN***

Due to the soft material and thin walls of the MCHE coils, the traditional field maintenance method recommended for Round Tube Plate Fin (RTPF) coils does not apply to microchannel coils. Moreover, chemical cleaners are a risk factor to MCHE due to the material of the coil. The manufacturer does not recommend the use of chemical cleaners to clean microchannel coils. Using chemical cleaners could lead to warranty claims being further evaluated for validity and failure analysis.

## Maintenance

---

The recommended cleaning method for microchannel condenser coils is pressurized water or air with a non-pinpoint nozzle and an ECU of at least 180 with pressure no greater than 600 psi. To minimize the risk of coil damage, approach the cleaning of the coil with

the pressure washer aimed perpendicular to the face of the coil during cleaning. Optimum clearance between the sprayer nozzle and the microchannel coil is 1"–3".

# Maintenance Log

[illegible]

**Note:** Perform each inspection once per month (during cooling season) while unit is operating

# Wiring Diagram Matrix

**Table 13. Wiring schematics R-410A cooling**

Model Number	Ton	Refrigerant Circuit	Voltage	Hz	Ph	Schematics		Connection Diagrams	
						ReliaTel	Electromechanical	ReliaTel	Electromechanical
TTA061GD	5	Single	380-415	50	3	12131506	12131502	12131516	12131511
TTA061HD	5	Dual	380-415	50	3	12131507	12131503	12131517	12131512
TTA073G3	6	Single	208-230	60	3	12131506	12131502	12131516	12131511
TTA073G4	6	Single	460	60	3	12131506	12131502	12131516	12131511
TTA073GW	6	Single	575	60	3	12131506	12131502	12131516	12131511
TTA073GK	6	Single	380	60	3	12131506	12131502	12131516	12131511
TTA073H3	6	Dual	208-230	60	3	12131507	12131503	12131517	12131512
TTA073H4	6	Dual	460	60	3	12131507	12131503	12131517	12131512
TTA073HW	6	Dual	575	60	3	12131507	12131503	12131517	12131512
TTA073HK	6	Dual	380	60	3	12131507	12131503	12131517	12131512
TTA076GD	6.25	Single	380-415	50	3	12131506	12131502	12131516	12131511
TTA076HD	6.25	Dual	380-415	50	3	12131507	12131503	12131517	12131512
TTA090G3	7.5	Single	208-230	60	3	12131506	12131502	12131516	12131511
TTA090G4	7.5	Single	460	60	3	12131506	12131502	12131516	12131511
TTA090GW	7.5	Single	575	60	3	12131506	12131502	12131516	12131511
TTA090GK	7.5	Single	380	60	3	12131506	12131502	12131516	12131511
TTA090H3	7.5	Dual	208-230	60	3	12131507	12131503	12131517	12131512
TTA090H4	7.5	Dual	460	60	3	12131507	12131503	12131517	12131512
TTA090HW	7.5	Dual	575	60	3	12131507	12131503	12131517	12131512
TTA090HK	7.5	Dual	380	60	3	12131507	12131503	12131517	12131512
TTA101GD	8.33	Single	380-415	50	3	12131506	12131502	12131516	12131511
TTA101HD	8.33	Dual	380-415	50	3	12131507	12131503	12131517	12131512
TTA101JD	8.33	Manif	380-415	50	3	12131508	12131503	23130418DRW	12131512
TTA120G3	10	Single	208-230	60	3	12131506	12131502	12131516	12131511
TTA120G4	10	Single	460	60	3	12131506	12131502	12131516	12131511
TTA120GW	10	Single	575	60	3	12131506	12131502	12131516	12131511
TTA120GK	10	Single	380	60	3	12131506	12131502	12131516	12131511
TTA120H3	10	Dual	208-230	60	3	12131507	12131503	12131517	12131512
TTA120H4	10	Dual	460	60	3	12131507	12131503	12131517	12131512
TTA120HW	10	Dual	575	60	3	12131507	12131503	12131517	12131512
TTA120HK	10	Dual	380	60	3	12131507	12131503	12131517	12131512
TTA120J3	10	Manif	208-230	60	3	12131508	12131503	23130418DRW	12131512
TTA120J4	10	Manif	460	60	3	12131508	12131503	23130418DRW	12131512
TTA120JW	10	Manif	575	60	3	12131508	12131503	23130418DRW	12131512
TTA120JK	10	Manif	380	60	3	12131508	12131503	23130418DRW	12131512
TTA126HD	10.4	Dual	380-415	50	3	12131507	12131503	12131517	12131512
TTA150H3	12.5	Dual	208-230	60	3	12131507	12131503	12131517	12131512
TTA150H4	12.5	Dual	460	60	3	12131507	12131503	12131517	12131512
TTA150HW	12.5	Dual	575	60	3	12131507	12131503	12131517	12131512
TTA150HK	12.5	Dual	380	60	3	12131507	12131503	12131517	12131512
TTA156HD	13	Dual	380-415	50	3	12131506	12131502	12131690	12131680
TTA156JD	13	Manif	380-415	50	3	12131508	12131503	12131695	12131681
TTA180H3	15	Dual	208-230	60	3	12131506	12131502	12131690	12131680
TTA180H4	15	Dual	460	60	3	12131506	12131502	12131690	12131680
TTA180HW	15	Dual	575	60	3	12131506	12131502	12131690	12131680
TTA180HK	15	Dual	380	60	3	12131506	12131502	12131690	12131680
TTA180J3	15	Manif	208-230	60	3	12131508	12131503	12131695	12131681

**Table 13. Wiring schematics R-410A cooling (continued)**

Model Number	Ton	Refrigerant Circuit	Voltage	Hz	Ph	Schematics		Connection Diagrams	
						ReliaTel	Electromechanical	ReliaTel	Electromechanical
TTA180J4	15	Manif	460	60	3	12131508	12131503	12131695	12131681
TTA180JW	15	Manif	575	60	3	12131508	12131503	12131695	12131681
TTA180JK	15	Manif	380	60	3	12131508	12131503	12131695	12131681
TTA201HD	16.7	Dual	380-415	50	3	12131506	12131502	12131690	12131680
TTA201JD	16.7	Manif	380-415	50	3	12131508	12131503	12131695	12131681
TTA240H3	20	Dual	208-230	60	3	12131688	12131665	12131691	12131519
TTA240H4	20	Dual	460	60	3	12131506	12131502	12131690	12131680
TTA240HW	20	Dual	575	60	3	12131506	12131502	12131690	12131680
TTA240HK	20	Dual	380	60	3	12131506	12131502	12131690	12131680
TTA240J3	20	Manif	208-230	60	3	12131692	12131666	12131693	12131520
TTA240J4	20	Manif	460	60	3	12131508	12131503	12131695	12131681
TTA240JW	20	Manif	575	60	3	12131508	12131503	12131695	12131681
TTA240JK	20	Manif	380	60	3	12131508	12131503	12131695	12131681
TTA251JD	20.9	Manif	380-415	50	3	12131508	12131503	12131695	12131681
TTA300J3	25	Manif	208-230	60	3	12131692	12131666	12131693	12131520
TTA300J4	25	Manif	460	60	3	12131508	12131503	12131695	12131681
TTA300JW	25	Manif	575	60	3	12131508	12131503	12131695	12131681
TTA300JK	25	Manif	380	60	3	12131508	12131503	12131695	12131681

**Note:** Wiring diagrams are available through e-Library or by contacting your local sales office.

Ingersoll Rand (NYSE:IR) advances the quality of life by creating comfortable, sustainable and efficient environments. Our people and our family of brands—including Club Car®, Ingersoll Rand®, Thermo King® and Trane®—work together to enhance the quality and comfort of air in homes and buildings; transport and protect food and perishables; and increase industrial productivity and efficiency. We are a global business committed to a world of sustainable progress and enduring results. For more information, visit [www.ingersollrand.com](http://www.ingersollrand.com).

Ingersoll Rand has a policy of continuous product and product data improvements and reserves the right to change design and specifications without notice.

©2016 Ingersoll Rand All rights reserved

SS-SVX10H-EN 22 Sep 2016

Supersedes SS-SVX10G-EN (September 2015)

We are committed to using environmentally  
conscious print practices that reduce waste.

